## Key to 1981 240D (123.123) (US) wiring diagram

- 1 Headlamp unit, left
  - High beam
  - Low beam b
  - Fog lamp
  - Parking/standing/side marker lamp
  - Turn signal lamp
- Brake fluid indicator lamp switch I
- Brake fluid indicator lamp switch II
- Contact sensor, brake pads, front,
- 5 Contact sensor, brake pads, front, right
- Instrument cluster
  - Turn signal indicator lamp, left
  - Brake pad wear indicator lamp b
  - Brake fluid and parking brake indicator lamp
  - Fuel reserve warning lamp d
  - Fuel gauge
  - Coolant temperature gauge f
  - Instrument lamps g
  - Rheostat, instrument lamps
  - Charge indicator lamp
  - High beam indicator lamp
  - Turn signal indicator lamp, right
  - Electronic clock
  - Seat belt system warning lamp m Preglow indicator lamp
- Parking brake indicator lamp switch
- Cigar lighter with ashtray illumination 8
- Radio\*
- 10 Headlamp unit, right
  - High beam
  - Low beam b
  - Fog lamp C
  - Parking/standing/side marker lamp
  - Turn signal lamp
- Automatic antenna
- 12 Driver's belt buckle switch
- 13 Actuator, cruise control\*
- Temperature sensor, coolant
- 15 Warning buzzer contact
- 16 Front dome lamp w/switch
- Door contact switch, front, right 17
- 18 Door contact switch, front, left
- Dual-tone horn (fanfare) 19
- 20 Sensor, cruise control\*
- 21 Amplifier, cruise control\*

- 22 Warning flasher switch/timer
- Horn contact 23
- 24 Combination switch
  - Turn signal lamp switch
  - Headlamp flasher switch
  - Dimmer switch C
  - d Washer switch
  - Switch, wiping speed
    - I Intermittent wiping
    - II Slow wiping
    - III Fast wiping
- 25 Switch, cruise control\*
  - A Off
  - V Decelerate/set
  - SP Resume
  - B Accelerate/set
- 26 Glove compartment lamp switch
- 27 Glove compartment lamp
- 28 Fuse box
- 29 Switch, automatic antenna\*
- 30 Relay, window lifts
- 31 Warning device
- Sliding roof motor\* 32
- 33
- Switch, electrically operated sliding roof\*
- 34 Solenoid valve, automatic transmission\*
- 35 Kick-down switch\*
- 36 Lighting switch
- 37 Starter switch
- 38 Stop lamp switch
- 39 Wiper motor
- 40 Intermittent wiping timer
- Washer pump
- 42 Blower switch with lamp
- 43 Relay, air conditioner
- 44 Pressure switch, refrigerant compressor\*
  - On 2.6 bar, Off 2.0 bar
- 45 Electromagnetic clutch, refrigerant compressor\*
- 46 Starter lockout and backup lamp switch\*
- Temperature switch 52 °C (126 °F) 47 receiver drier"
- 48 Illumination
  - Air deflector control
  - b Heater control
  - Switch\*
- 49 Preglow time relay with glow plugs
- 50 Switch, window, rear, left\*

- 52 Switch cluster, window lifts\*
  - Switch, window, rear, left
  - b Safety switch
  - Switch, window, front, left
  - Switch, window, front, right
  - Switch, window, rear, right Window lift motor, front, left"
- 54 Blower motor
- Pre-resistance, blower motor
- 56 Temperature control, air conditioner\*
- Temperature control, air conditioner\* 57
- Switch-over valve, fresh/recirculating air flap'
- Auxiliary fan\*
- 60 Relay, auxiliary fan\*
- Switch, heated rear window 61
- 62 Time-lag relay, heated rear window
- 63 Trunk lamp
- 64 Window lift motor, front, right\*
- 65 Connector, tail lamp cable harness
- 66 Door contact switch, rear, left\*
- 67 Starter
- 68 Battery
- 69 Alternator w/electronic regulator
- 70 Rear dome lamp switch\*
- Door contact switch, rear, right\*
- 72 Rear dome lamp\*
- 73 Fuel gauge sending unit
- Window lift motor, rear, right\* 74
- Switch, window, rear, right'
- 76 Tail lamp unit, left
  - Side marker lamp
  - Turn signal lamp b
  - Tail/standing lamp C
  - Backup lamp d
  - Stop lamp
- License plate lamp
- 78 Heated rear window
- 79 Illumination, shift plate\*
- 80 Tail lamp unit, right
  - Side marker lamp
  - Turn signal lamp
  - Tail/standing lamp Backup lamp

C

Stop lamp

Special equipment

Wire Color Code nf = neutral

= blue = brown rs = pink br

= ivory rt = red el

sw = black

= yellow = green vi = purple gn ws = white

ge

Example: Wire designation 1.5 gr/rt

Basic color gr = grey

Identifiaction color rt = red Cross section of wire 1.5 = 1.5 mm<sup>2</sup> Ground connections

M1 Main ground

(behind instrument cluster)

M2 Ground, front, right

(near headlamp unit)

M4 Ground, dome lamp, front

M5 Ground, engine

M6 Ground, trunk, wheelhouse, left M7 Ground, trunk, wheelhouse, right