


### Removal

---

1 Remove cover on right below instrument panel (righthand steering left) (68—150).


2 Remove cover (80) for blower cover.

3 Disconnect 2-pole coupling (82).

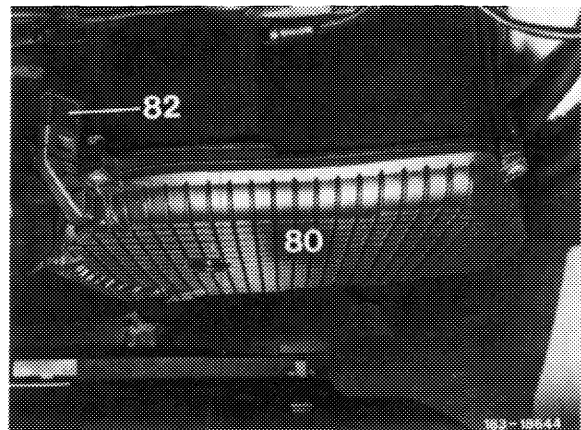

4 Remove bolts (81) on blower motor flange.

5 Remove blower motor (11) from blower housing.

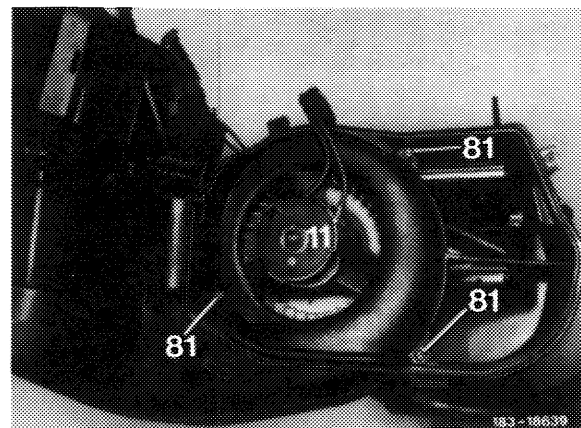

### Installation

---

6 Insert blower motor (11) in blower housing and screw on with bolts (81).

7 Install cover (80) for blower cover.

8 Connect 2-pole coupling (82) and check function of heater blower.

9 Install cover on right below instrument panel (righthand steering left) (68—150).