


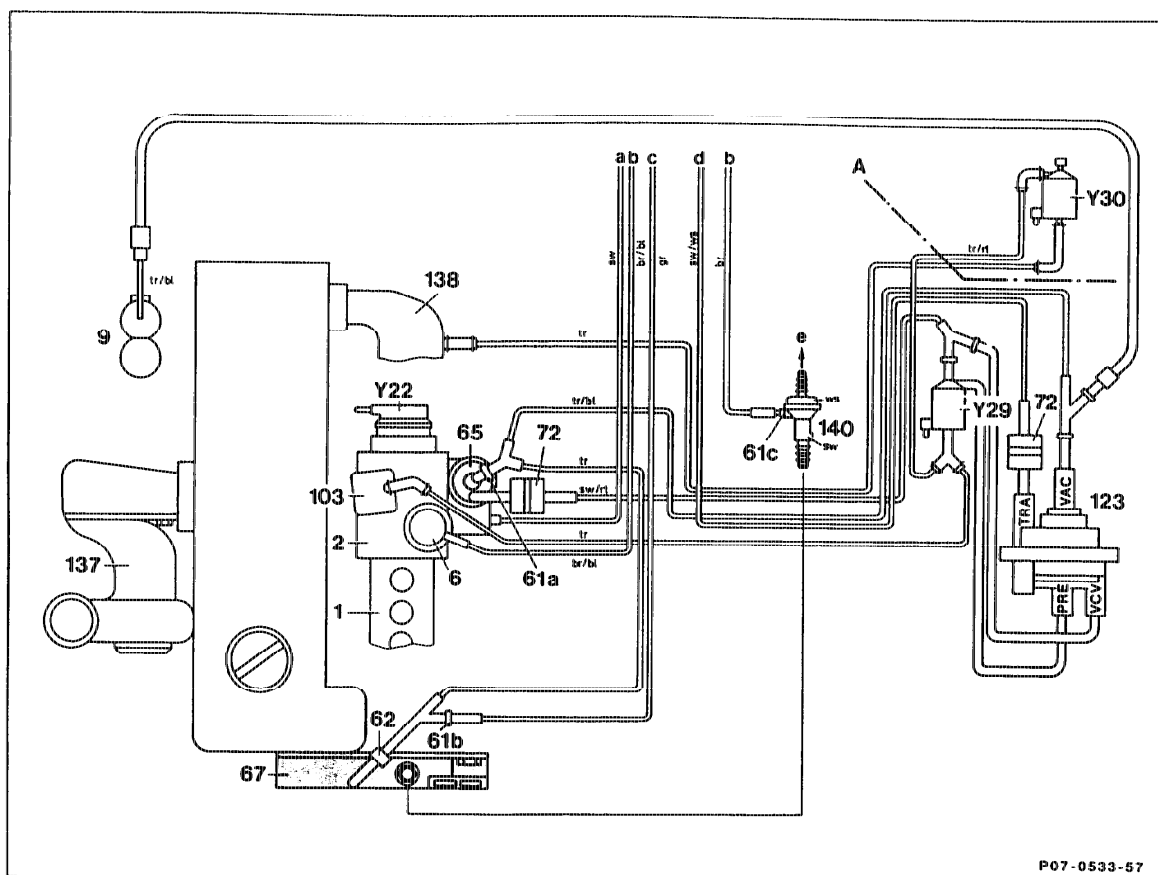

P07-0533-57

Pressure and Vacuum Line Routing Engine 602.962 Standard Model 124

1	Injection pump	Y22	ELR actuator
2	Governor	Y29	Vacuum amplifier switchover valve, automatic transmission
6	Stop unit	Y30	Switchover valve, engine overload protection
9	Vacuum reservoir (in right front wheelhouse, behind plastic cover)	A	Partition wall
61a	Restriction	a	Ventilation to passenger compartment
61c	Restriction Ø 0.5 mm (orange)	b	Key shut-off
62	Filter	c	Other ancillaries
65	Vacuum control valve	d	To vacuum unit, automatic transmission
67	Vacuum pump	e	To brake booster
72	Damper		
103	ALDA unit		
123	Vacuum amplifier		
137	Turbocharger		
138	Charge air distribution pipe		
140	Non-return valve - brake booster		
			Pressure and vacuum connections to vacuum transducer or vacuum amplifier
		PRE	Charge pressure
		TRA	Transmission
		VAC	Vacuum
		VCV	Vacuum control valve