

35-110 Removal and installation of semi-trailing arm, replacement of rubber bearings

Slide fluid for pressing-in rubber bearings

Slide fluid (Naphtolene H or slide paste Fahr)	000 989 08 60
--	---------------


Tightening torques

Hex nut for attaching semi-trailing arm to rear axle carrier	Nm	120
--	----	-----

Hex bolt for attaching rear axle shaft to rear axle shaft flange	1st version (M 12)	95
	2nd and 3rd version (M 8)	30


Special tools

Assembly device for removal and installation of rear axle shaft on rear axle shaft flange

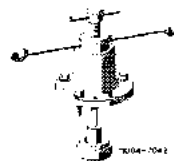

116 589 24 61 00

Remover and installer for rubber bearing on semi-trailing arm

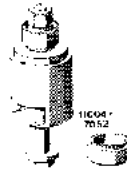

116 589 13 43 00

Removal

- 1 Completely remove rear axle together with rear axle carrier (35-010).
- 2 Lower semi-trailing arm down to deflection stop.
- 3 Loosen hex. screw (M 12) of 1st version or hex. screw (M 8) with spacing sleeve and tensioning washer of 2nd and 3rd version for attaching rear axle shaft to rear axle shaft flange and remove.

