



MAIN FUSE BOX

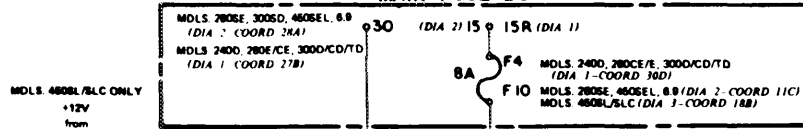

MDLS 460L/SLC ONLY
+12V
from
C106
(DIA 3 COORD 3C)


4 RD (MDLS 460L/SLC ONLY)

WINDOW RELAY

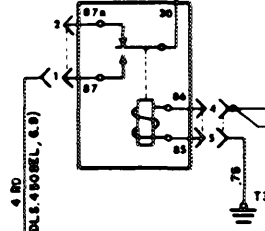

MOD. 300SD ONLY
+12V
from
IGNITION SW. TERM R
(DIA 2 COORD 10E)


MAIN FUSE BOX

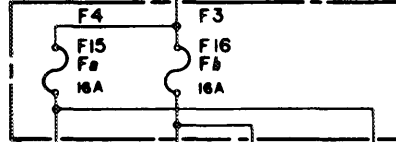


NOTE: FUSES F3 & F4 : MDLS 450L/SLC (DIA 1)
FUSES F15 & F16 : MDLS 280SE, 300SD, 460SEL, 6.9 (DIA 2)
FUSES F8 & F6 : MDLS 2400, 280CE/E, 3000/CD/TD (DIA 1)

C107


CONSOLE SWITCH ASSEMBLY

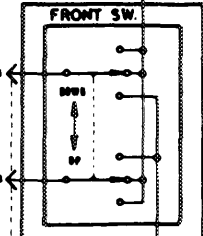

CONSOLE SWITCH ASSEMBLY

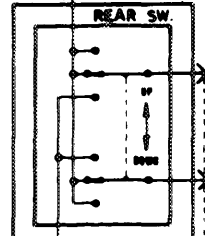


LEFT REAR WINDOW SWITCH

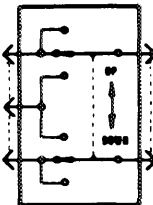


LEFT REAR WINDOW MOTOR

RIGHT REAR WINDOW MOTOR

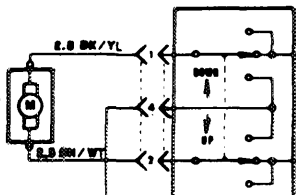

LEFT FRONT WINDOW MOTOR

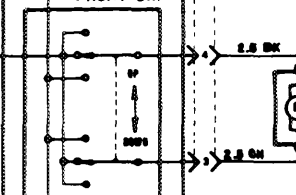

RIGHT FRONT WINDOW MOTOR

