


83-604 Vacuum function diagram

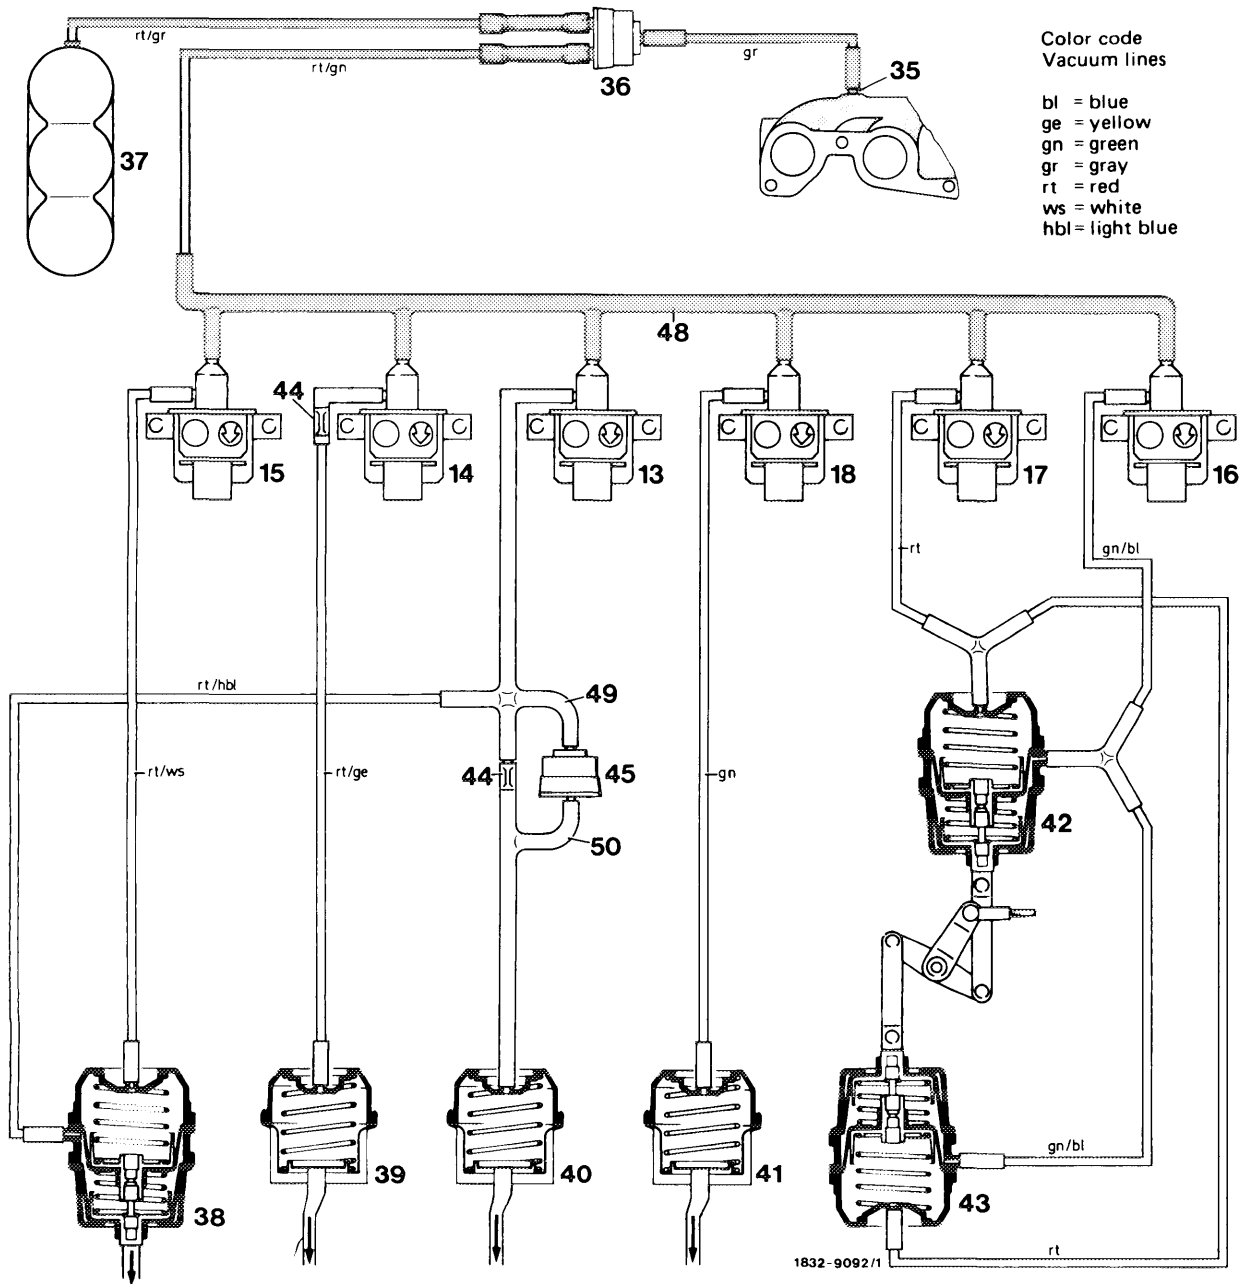

Function diagram 1, function selection "a" (defrosting)

- | | |
|---|---|
| <p>13 Switchover valve for center nozzle flap
 14 Switchover valve for leg room flaps
 15 Switchover valve for defroster nozzle flaps
 16 Switchover valve for vacuum elements of fresh air-recirculated air flap and main air flap (small stroke)
 17 Switchover valve for vacuum elements of fresh air-recirculated air flap and main air flap (large stroke)
 18 Switchover valve for scoop air flap
 35 Vacuum connection on intake pipe
 36 Check valve
 37 Vacuum reservoir
 38 Vacuum element for defroster nozzle flaps (flaps "open")
 39 Vacuum element for leg room flaps (flaps "closed")</p> | <p>40 Vacuum element for center nozzle flap (flap "closed")
 41 Vacuum element for scoop air flap (flap "closed")
 42 Vacuum element for fresh air-recirculated air flap and main air flap (flap "open", 100 % fresh air supply)
 43 Vacuum element for fresh air-recirculated air flap and main air flap (flap "open", 100 % fresh air supply)
 44 Orifice
 45 Check valve
 48 7-point distributor
 49 4-point distributor
 50 3-point distributor</p> |
|---|---|