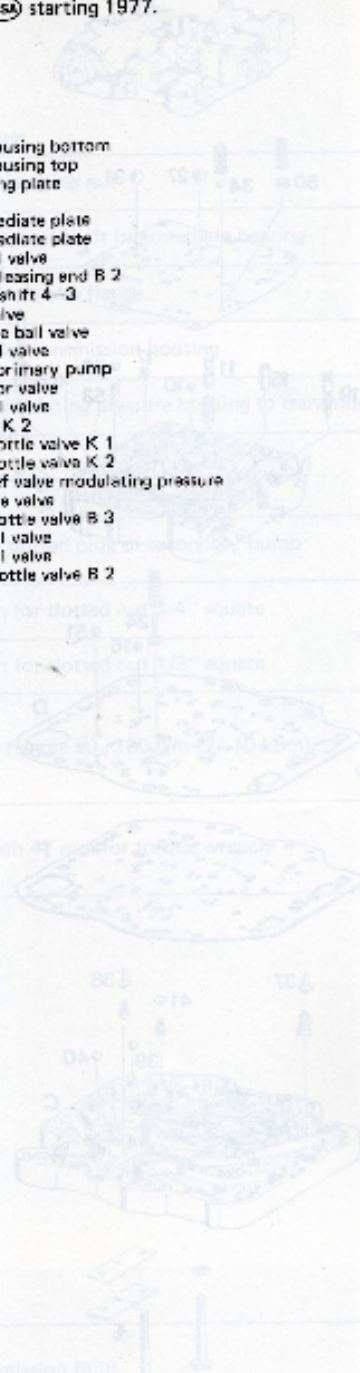


All shift valve housings, except those for transmission
722.112 (J) (USA) starting 1977.

- 
- A Shift valve housing bottom
 - B Shift valve housing top
 - C Oil distributing plate
 - D Gasket
 - E Small intermediate plate
 - F Large intermediate plate
 - 10 Two-way ball valve
 - 11 Shift valve releasing end B 2
 - 15 Piston brake shift 4-3
 - 16 Check ball valve
 - 17 Three-throttle ball valve
 - 22 Two-way ball valve
 - 24 Check valve primary pump
 - 25 Range selector valve
 - 26 Two-way ball valve
 - 26a Detent valve K 2
 - 27 One-way throttle valve K 1
 - 31 One-way throttle valve K 2
 - 34 Pressure relief valve modulating pressure
 - 37 Lube pressure valve
 - 38 One-way throttle valve B 3
 - 39 Two-way ball valve
 - 40 Two-way ball valve
 - 41 One-way throttle valve B 2
 - 50 Filter
 - 51 Ball valve
 - 52 Ball valve
 - 53 Plastic pin