


Special tool

- Pressure valve holder (7) \_\_\_\_\_  
tightening torque 35 Nm,  
special tool 617 589 01 09 00,  
renew
- Compression spring (7f), copper seal (7f) \_\_\_\_\_  
rinse in fuel before installing.
- Pressure valve (7k) \_\_\_\_\_  
pay attention to installed position.
- O-ring (7h) \_\_\_\_\_  
oil before assembling.

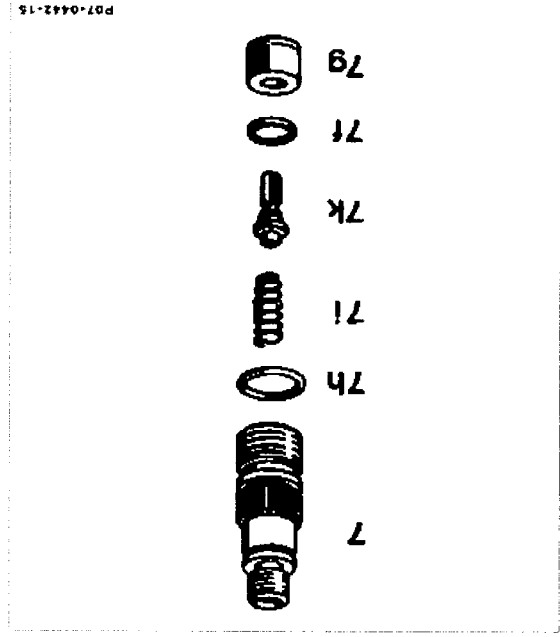

### 07-1-8627 Replacing Pressure Valve Seal

Operation no. of operation texts and work units or standard texts and flat rates: 07-8627