

fuse no.	fuse designation	USA version	fuse no.
b ○	window lift front left, rear right	window lift front right, rear left	a ○
2 □	high beam right, high beam indicator	parking/tail light right, warning buzzer, license plate/instrument/hazard warning switch/heater and ventilation controls/rocker switches illumination, (electronic radio illumination)	1 □
4 □	high beam left		
6 ○	low beam right, fog light	parking/tail light left	3 □
8 □	low beam left	front seat adjustm., seat cushion front high-low respect rear high-low (memory), fore-aft	5 ●
10 □	control unit, water pump, heating water valve, blower motor inside temperatur sensor for automatic climate control system, back-up lamp, overload protection, autom. transmission, relay auxiliary fan term. 86, overload protection	windshieldwiper and washer, optical horn, outside mirror, relay window lift term. 86	7 ○
		cigar lighter, glove compartment light, radio, heating system for washer jets (seat heating front*)	9 □(○*)
12 □	stop-turn signal lamp, instrument cluster, diagnostic, warn. monitor term. 8, cruise control, tachometer	blower motor, air condit. compressor, switch-over valve idle stabiliz.	11 ●
14 ●	heated rear window, horn, safety belt handover arm, cigar light rear (seat heating rear)	diagnostic, hazard warn. system, clock, central locking system, control unit memory of seat adjustment system, (electronic radio)	13 □
16 ○	(sliding roof, adjustable seat rear)	trunk light, roof light front and rear, illumin. vanity mirror, safety belt handover arm, door lights, autom. antenna, warning monitor term. 5	15 □
d ●	front seat adjustm. seat cushion rear high-low resp. front high-low (memory) seat back adjustment	auxiliary fan	c ○

□ 8 A (white)

126 545 07 00

○ 16 A (red)

● 25 A (blue)