
Repair information

Removal and installation of window molding on side of windshield

Preliminary jobs:

68-400

Trim above windshield removed (<u>68-410</u>). Reveal molding above windshield removed (<u>68-425</u>). Operation no. of operation texts and work units or standard texts and flat rates:

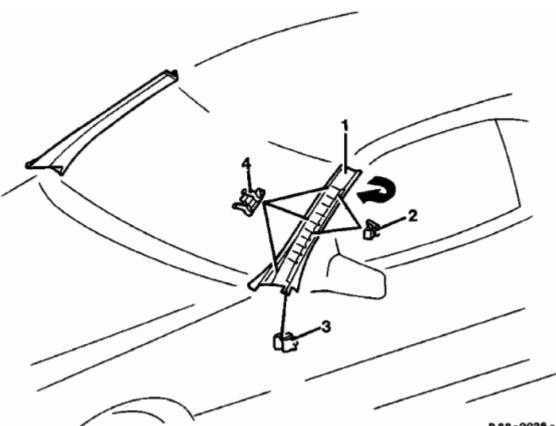

P 68-0026-57

P68-0026-57

Window molding (1)	unhook by twisting out of retaining clamps (2, 2 each) in direction of arrow and pull out of retaining clamps (4) in vehicle longitudinal direction.
	Installation: Insert retaining clamps (2, 3, 4) into front pillar and window molding.