


|                  |                                                         |         |
|------------------|---------------------------------------------------------|---------|
| AR80.35-P-4215GH | Synchronize transmission signal of radio remote control | 16.2.99 |
|------------------|---------------------------------------------------------|---------|

MODEL 163.113 /128 /136 /154 /172 /174 /175

- 1 Activate button
- 2 Lock button
- 3 Unlock button
- 4 Tailgate unlock button
- 5 Panic button (USA)

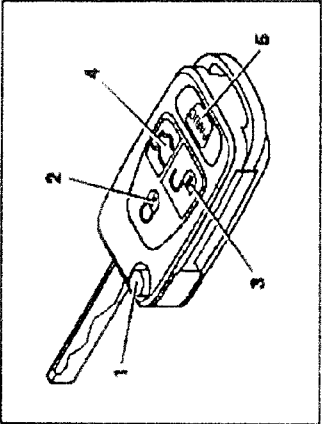

P80 30-0483-01

|          |                                                                                                                                                                              |  |  |
|----------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--|--|
| <b>i</b> | If it is not possible to lock or unlock the vehicle, it may be necessary to synchronize the locking system.<br>The reading-in process must be carried out within 10 seconds. |  |  |
| 1        | Insert remote control key into ignition lock and turn into position 2                                                                                                        |  |  |
| 2        | Withdraw key and press button (2) "Lock" and hold while at the same time pressing button (3) "Unlock" five times.                                                            |  |  |
| 3        | Release buttons and then press one of the two buttons another once.                                                                                                          |  |  |