
- Handle Lock cylinder guide 2
- Rotating rod 3
- Base
- Base
- 5 6 Screw
- 7 Retaining strap
- 8 Bearing bracket
- 9 Screw
- Screw opening 10

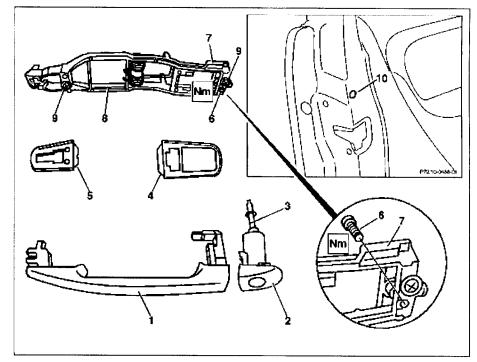

P72.10-0488-06

IX X	Removal, installation		
1	Loosen screw (6)	i Accessible through opening (10) on inner side of door, loosen screw (6) max. 5 turns	
		Nm	*BA72.10-P-1003-01D
2	Pull off cylinder guide (2) outward to remove	i Installation: Insert rotary rod (3) into door lock actuating mechanism	
3	Pull handle (1) toward rear together with base (4) out of bearing bracket (8)		
4	Remove base (5)	Installation: Insert base (5) into bearing bracket (8)	
5.1	Remove bearing bracket (8)	i Only if bearing bracket is defective. The bearing bracket (8) can only be removed through the installation opening in the inner door panel. For this purpose, Remove door liner on front door	AR72.10-P-1000GH
6	Install in opposite order	Tremove door liner on front door	ARTZ. IU-P- IUUUGFI
7	Adjust clearance between handle (1) and actuating lever on door lock with eccentric adjustment screw	LiEccentric adjustment screw: Accessible through opening on end of door. Use Phillips screwdriver	
8	Check for proper function		

Nm Front door

Designation		Model 163
Screw for door handle	Nm	3