



- 7 Unscrew bolts (211, 652, 651, 215).
Remove bracket (213).
Tightening torque for bolt (211) 75 Nm.

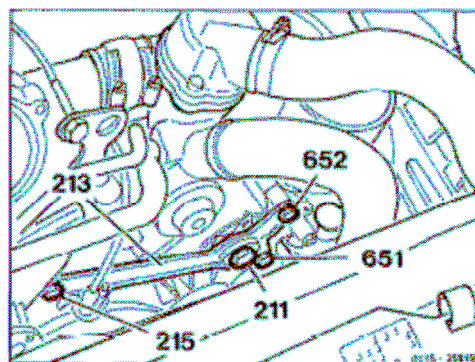

Installation instruction


Apply sealant 001 989 29 20 to the front and rear sides of the mounting hole (arrow) of the bracket (213).

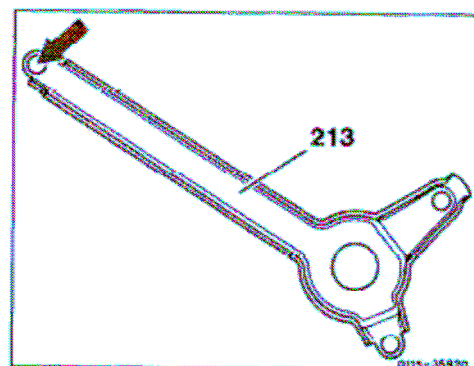

- 8 Take off setting pointer (219), carefully pull tensioning device (221) forward and remove.

Installation instruction

In the untensioned state, the setting pointer (219) must be aligned with the first graduation mark (arrow).

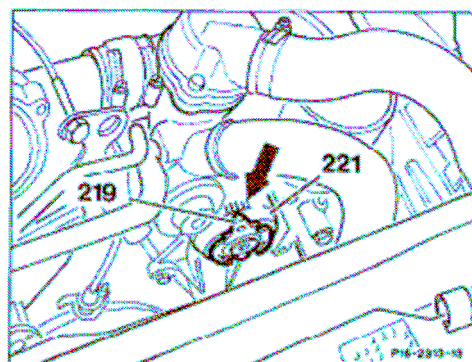

- 9 Unscrew bolts (277, 278).

- 10 Swivel tandem pump in direction of arrow.
Remove bracket (230).

- 11 Install in the reverse order.

