


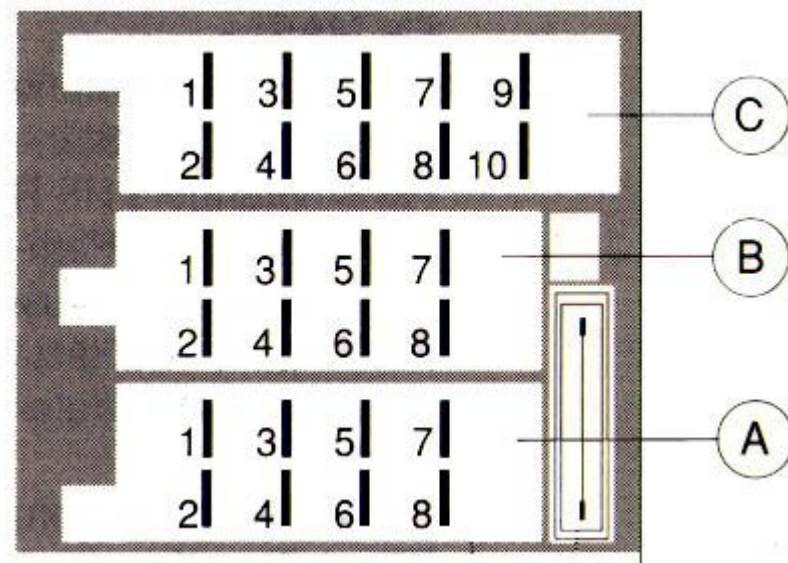

Pin	A	B	C
1	Speed dependent volume control (GAL)	Right rear +	Connection
2	Not used	Right rear -	for Becker
3	Phone mute (ground to activate)	Right front +	CD changer
4	Constant 12V	Right front -	
5	Ant trig (12V when radio on)	Left front +	
6	Illumination	Left front -	
7	Ignition	Left rear +	
8	Ground	Left rear -	

[HOME](#)