
#### MODEL 166 60 % rear seat cushion

#### Shows model 166.0

- Electrical connector 1
- 2 7 Bolts
- Electrical line



P91.12-3561-01

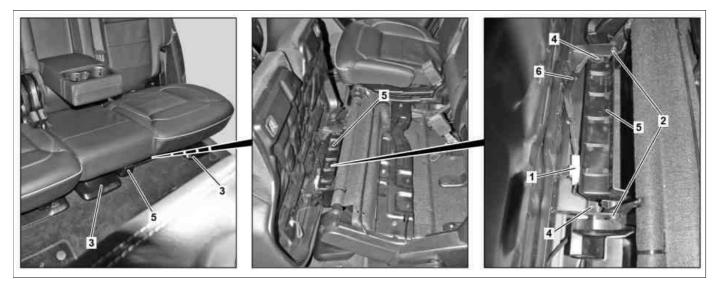

P91.12-3650-08

### Shown on model 166.8

- Electrical connector 1
- 2 Bolts
- 3 Covers

- 4 Bolts
- 5 Cover
- Electrical line 6

⚠ Danger !	<b>Risk of injury</b> . Moving parts can pinch, crush or, in extreme cases even sever extremities.	No parts of the body or limbs should be within the operating area of the mechanism when the components are moving.	
XX	Remove/install		
1	Remove both covers (3) at vehicle floor	MODEL 166.860 % rear seat cushion	
2	Fold up rear seat cushion		
3	Remove screws/bolts (4) and remove cover (5)	MODEL 166.860 % rear seat cushion	
4.1	Disconnect electrical connector (1)	MODEL 166.0 with CODE 872 (Electrically heated left and right rear seats)60 % rear seat cushion i Ensure that electrical line (7) is routed correctly.	
4.2	Disconnect electrical connector (1) and unclip electrical line (6) from rear seat cushion	MODEL 166.8 with CODE 872 (Electrically heated left and right rear seats)60 % rear seat cushion i Ensure that the electrical line (6) is routed correctly.	
5	Remove bolts (2)	<b>i</b> MODEL 166.860 % rear seat cushion <b>Installation:</b> Replace screws/bolts (2).	

		Nm	*BA91.12-P-1004-03F
		MODEL 166.8 60 % rear seat cushion Nm	*BA91.12-P-1001-03F
		MODEL 166.0 60 % rear seat cushion	
6	Remove rear seat cushion		
7	Install in the reverse order		

# Nm Rear seats

	-		
Number	Designation		MODEL 166.8
BA91.12-P-1004-03F	Bolt, rear seat cushion to rear seat console	Nm	25

## Nm Rear seats

Number	Designation		MODEL 166.0
BA91.12-P-1001-03F	Bolt, rear seat console to vehicle floor	Nm	50