


## 01-0500 Removing and installing cylinder head cover

Preceding work:  
Warning instructions when hood open (01-0085).

Operation no. of operation texts and work units or standard texts and flat rates  
01-5070

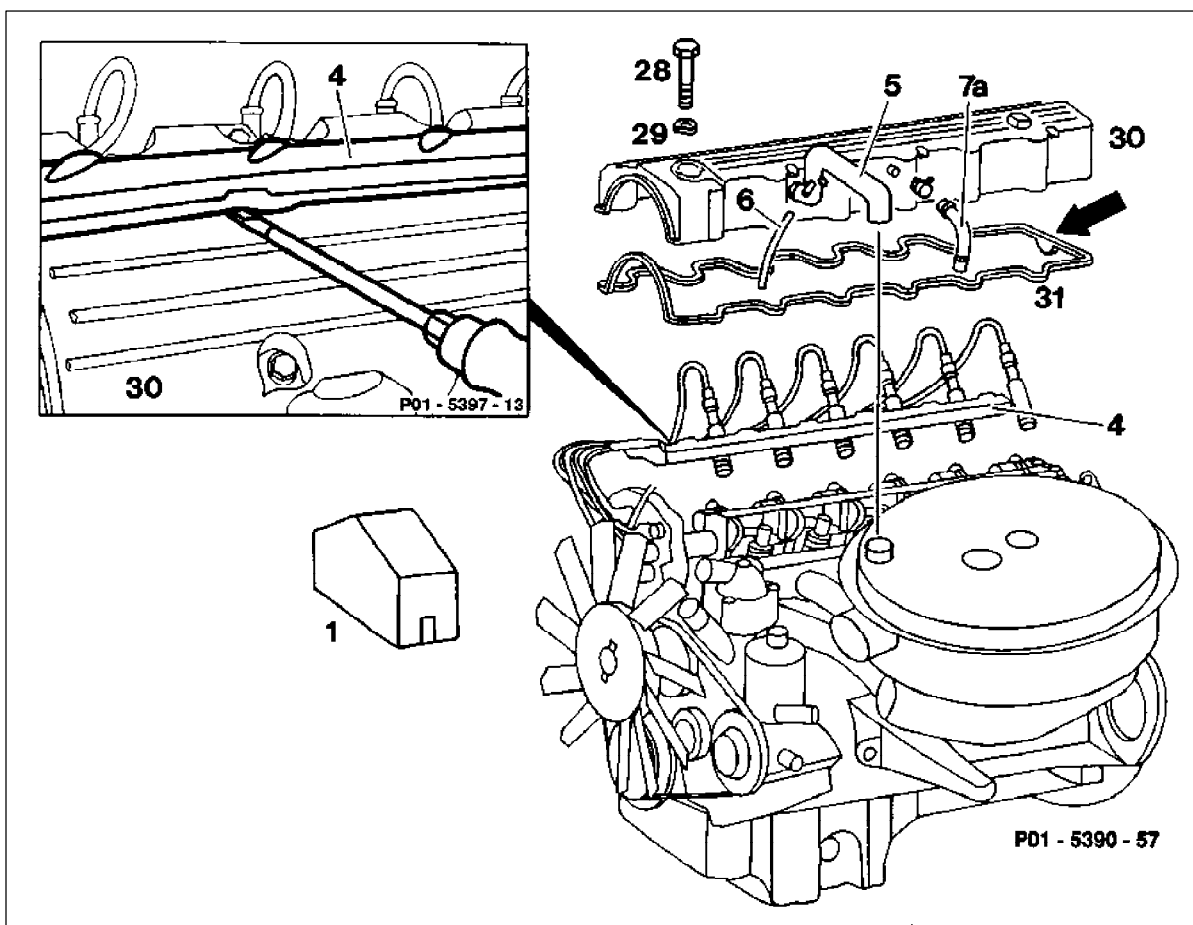

- Cover (1) above high-voltage distributor \_\_\_\_\_ unclip, remove, install.  
 All spark plug connectors \_\_\_\_\_ unplug, plug in.  
 Shaft (4) with spark plug cable \_\_\_\_\_ unclip from cylinder head cover (30) with a screwdriver, place to the side, install.  
 Air admission or vent hose (5) with vacuum hose (6) \_\_\_\_\_ detach from air cleaner, fit on.  
 Vent hose (7a) \_\_\_\_\_ detach from cylinder head cover (30), fit on.

M8\_ 75 screws (28) with washers (29) \_\_\_\_\_ unscrew, screw on (9 Nm).

Cylinder head cover (30) with gasket (31) \_\_\_\_\_ take off, fit on.

M

If cylinder head cover (30) is tight, do not strike it with a hammer; risk of cracking and fracturing.


Gasket (31) \_\_\_\_\_ replace according to condition.

Engine \_\_\_\_\_ run, check for leaks particularly at rear (arrow).

#### Tightening torque in Nm

Screws of cylinder head cover	9
-------------------------------	---

#### Special tool

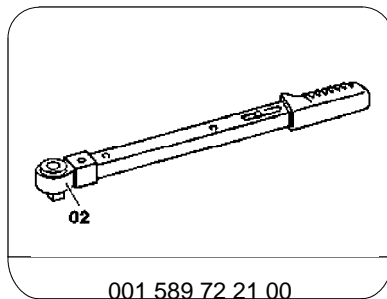

#### Note

The cylinder head gasket made of more heat-resistant material, installed as standard from November 1991 up to February 1992 and as of September 1992, should be installed when performing repairs.