


## MODEL 124

48/1 Cap  
 48/2 O-ring  
 48/3 O-ring  
 51 Fuel filler cap  
 B4 Fuel gauge sender  
 Arrow Fuel gauge sender coupling

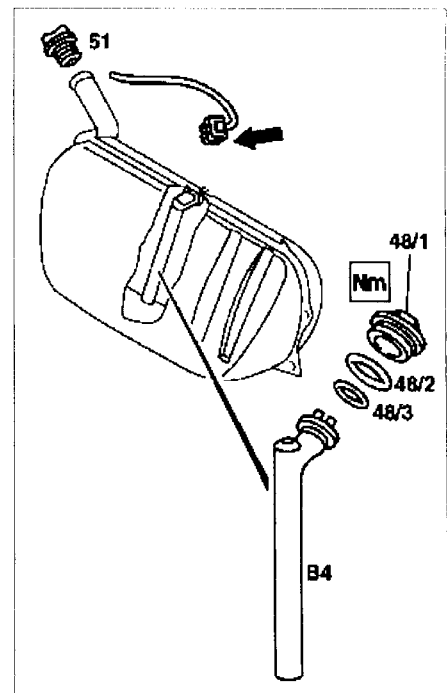

P47 10-0265-03

⊗ ⊗		Removal, installation	
STOP	Risk of explosion	Pay attention to accident prevention regulations!	
⚠	If fuel tank is full, pump out about 8 liters of fuel		
1	Remove trim for fuel tank in trunk	see Repair Instructions Body Removal and Installation Operations I Model 124 Op. no. 68-480	
2	Unplug coupling (arrow) for fuel gauge sender (B4)	Secure electric cable to prevent it slipping off	
3	Unbolt sealing flange (48/1) and fuel gauge sender (B4), respectively	Nm	*BA47.10-P-1003-01B
4	Take out fuel gauge sender (B4)		
5	Install in the reverse order		
6	Replace O-rings (48/2, 48/3)	i	Oil to facilitate installation

## Nm Fuel tank

Number	Designation	Model 124.034/ 036/06
BA47 10-P-1003-01B	Sealing flange and fuel gauge sender to fuel tank	Nm 40