


The evaporator temperature sensor (B10/6) is located in the air flow behind the evaporator.

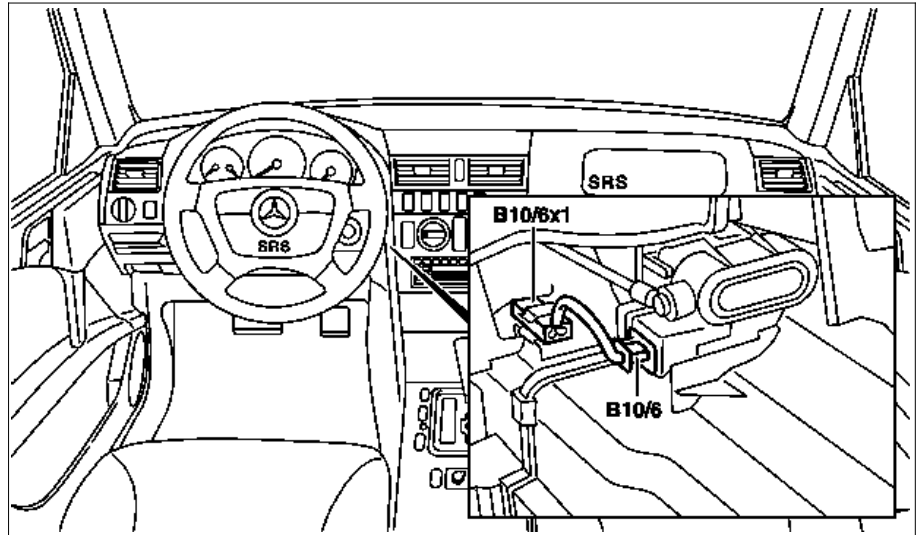

P83.57-2003-05