


MODEL 202 as of 1.6.97,
208,
210 as of 1.3.97,
215, 220, 240

- 1 Retainer
- 2 Mechanical key
- 3 Battery compartment
- 4 Direction of arrow
- 5 Direction of arrow
- 6 Batteries
- 7 Contact spring

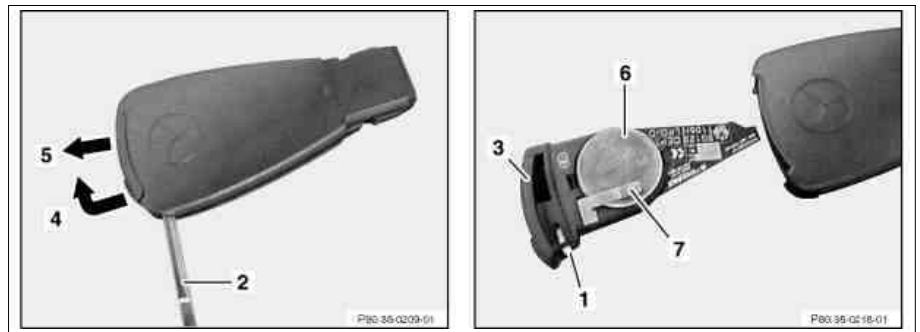

P80.35-0219-04

☒ ☒	Remove/Install		
i	The spare key cannot be opened, it contains no batteries.		
1	Take mechanical key (2) out of remote control key		
2	Press in retainer (1) with mechanical key (2)		
3	Lift battery compartment (3) slightly in direction of arrow (4)		
4	Remove battery compartment (3) in direction of arrow (5)	i Installation: Battery compartment must catch in key housing. i Discharged batteries have to be disposed of in an environmentally acceptable manner.	
5	Insert batteries (6) below contact spring (7)	i Installation: Observe polarity (plus sign toward top) ⚠ When inserting the batteries ensure that the battery contacts are free of grease.	
6	Install in the reverse order		