


Location of Relays in Fuse/Relay Box F1

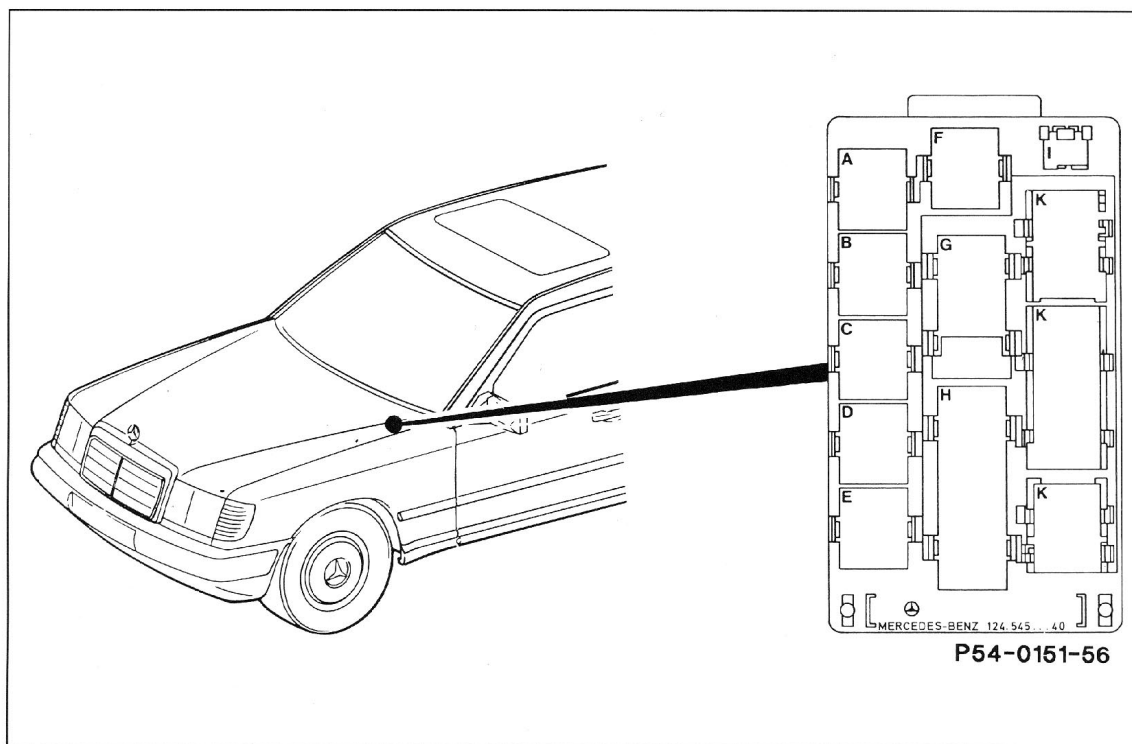

Relay Code	Designation	Relay-Funtion
A	K5	Power seat relay module
B	K9k1	Auxiliary fan relay Models 124.034/.036
	K10	Auxiliary fan preresistor relay module
C	K9	Auxiliary fan relay module
	K9k2	Auxiliary fan preresistor relay Models 124.034/.036
D	K2	Headlamp washer relay module
E	F14	Auxiliary fuse holder (ATA)
	K17	Secondary air injection relay module Models 124.034/.036
F	K24	Convenience relay module
G	K18/1	Seat belt warning relay module (Coupé only)
	K29/1	First gear start relay module
H	N10	Combination relay (turn/hazard signal, Heated rear window, Wiper motor)
I	V5	Disconnect diode (parking brake/ASR/electronic accelerator) Models 124.034/.036
K	N7	Exterior lamp failure monitoring module