

Ale10	"heated oxygen sensor" malfunction indicator lamp	N3	CFI control module
	1984/85: alternating display	N6	A/C compressor control module
	1986/87: failure display		
B2	Volume air flow sensor position Indicator	N16/1	Fuel pump relay module
B11/3	Engine coolant temperature sensor	((USA) 1984: (N5/1) in front of electrical center)	
B18	Barometric pressure sensor	S27/2	Deceleration shut-off microswitch
G3/2	Heated oxygen sensor	S29/1	Wide open throttle throttle position switch
G3/2x1	Heated oxygen sensor connector	XI 1	Diagnosis connector/terminal block terminal TD
G3/2x2	Oxygen sensor signal connector (1 -pole)	Y1	Electrohydraulic actuator
K1	Overvoltage protection relay	Y6	Idle air control valve
	((USA) 1984: in electrical center)		