

## Vacuum function diagram as of 09/86 Function selection cooling - recirculated air

<b>Y</b> 7	y1 y2 y3 y4 y5 y6 y7	Switchover valve strip 7-times Switchover valve for fresh/recirculated air flap (small lift) Switchover valve for fresh/recirculated air flap (large lift) Switchover valve for footwell flaps Switchover valve for center nozzle flap Switchover valve for defroster nozzle flaps (large lift) Switchover valve for diverter air flap Switchover valve for defroster nozzle flaps (small lift)	hbl drt ge mgn gr rt ws sw	light blue dark red yellow medium green grey red white black
35		Vacuum connection to intake manifold		
36		Check valve		
37		Vacuum reservoir (except on diesel models)		
38		Vacuum element for defroster nozzle flaps (flaps "closed")		
39		Vacuum element for footwell flaps (flaps "closed")		
40		Vacuum element for center nozzie flap (flap "open")		
41		Vacuum element for diverter air flap (flap "open")		
42		Vacuum element for fresh/recirculated air flap (flap in position 20% fresh air)		