


82-0680 R and R wiper motor

Preliminary work:
Cover air entry removed (83-0140).


Removal

- 1 Unscrew mounting screws.

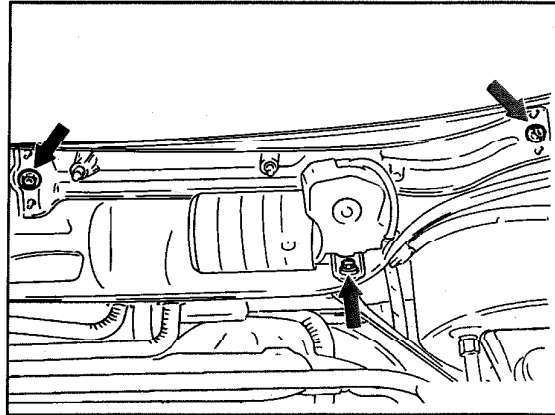


P82-3074-13

- 2 Pull off front connector.

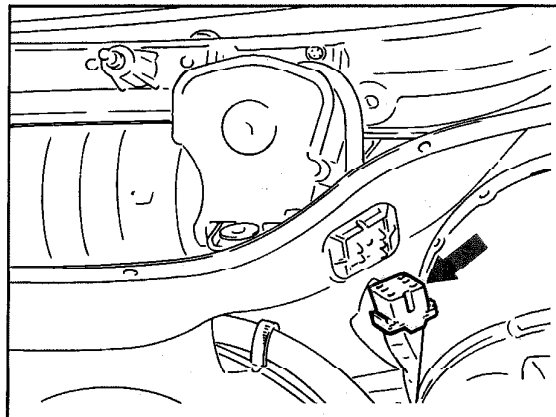

P82-3075-13

- 3 Compress mounting flange at the rear connector with a screwdriver.

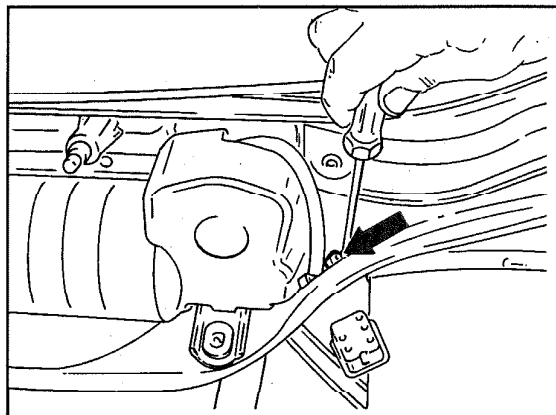


P82-3076-13

82-0680 R and R wiper motor


4 Push out rear connector through the firewall towards the front, twist and push through to the rear.

5 Remove wiper motor with linkage.

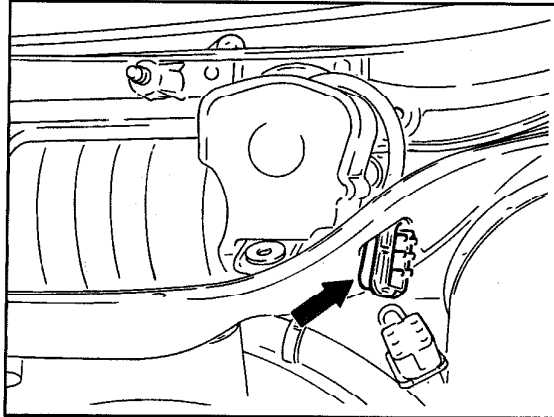

P82-3080-13


6 Unscrew nut on wiper motor shaft.

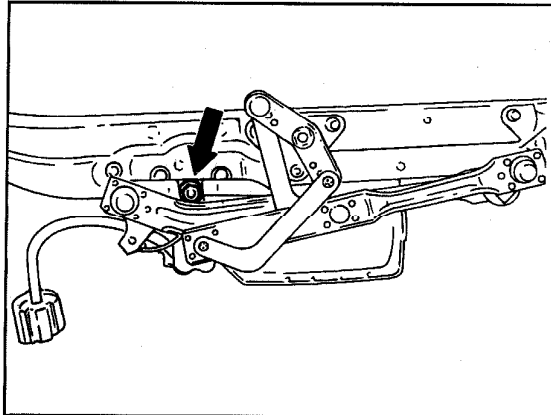

P82-3077-13

7 Fold away wiper linkage and unscrew the wiper motor mounting screws below.

8 Remove wiper motor.

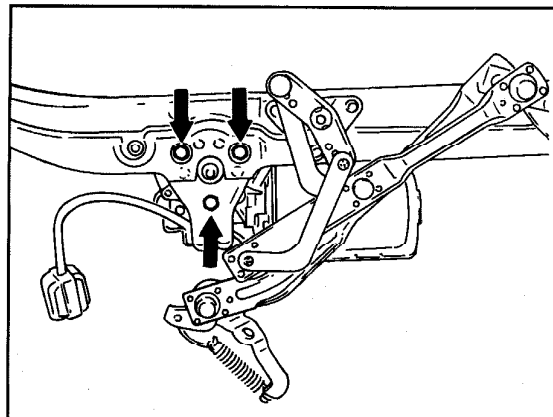


P82-3078-13

82-0680 R and R wiper motor

Installation

9 Screw wiper motor to base plate.

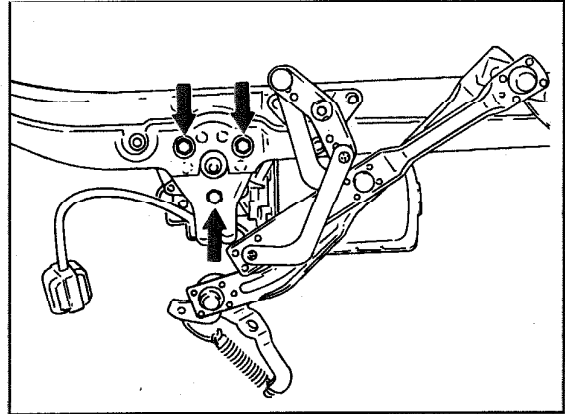


P82-3078-13

10 Push bell crank on the wiper motor shaft and start nut while ensuring that the lever on the right wiper axis faces down (arrow).

11 Line up bell crank so that the upper edge runs parallel to the wiper motor shaft (dashed lines).

12 Tighten nut on wiper motor shaft.

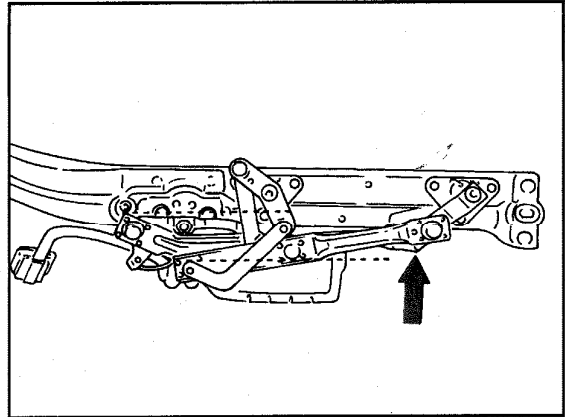

P82-3079-13

13 Mount wiper motor with linkage to front end.

14 Further installation should be carried out in reverse order.