

MODEL 203, 209


Shown on model 203.0

- 1 Catch tabs
2 Ashtray housing

E9/7 Front ashtray illumination





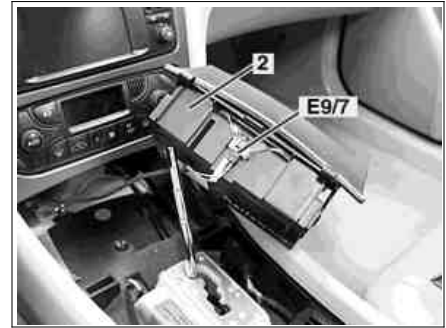

P68.20-2199-01



P68.20-2200-01

Modification notes

29.5.06	"Disconnect/connect battery ground line" removed		
---------	--	--	--

 	Remove/install		
1	Remove cover on gearshift lever	Model 203 Model 209 up to 31.5.04 Model 209 as of 1.6.04 without code P98 Black Series Model 209 with code P98 Black Series	AR68.20-P-2310P AR68.20-P-2310Q AR68.20-P-2310QA AR68.20-P-2310QBS
2.1	Actuate clutch pedal and engage second gear	with manual transmission	
2.2	Actuate selector lever release actuator and move selector lever rod toward rear Function of shift lock override	With automatic transmission Model 203 with transmission 722.6	GF27.10-P-3023P
 GF	Function of shift lock override	Model 209 with transmission 722.6	GF27.10-P-3023Q
 GF	Function of shift lock override	Model 203, 209 with transmission 722.9	GF27.10-P-3023NT
3	Open ashtray housing (2)		
4	Press catch tabs (1) back		
5	Unscrew ashtray housing (2)		
6	Disconnect electrical connector for front ashtray illumination (E9/7) on ashtray housing (2)		
7	Install in the reverse order		