

Crank window  
Entry light (1)

Screw on lock cover plate (2)

Screw (3) on door liner  
Wooden cover (4)

Screw in area of door handle

Door liner (5) on interior door panel

open.  
unclip at bottom, disconnect electrical connections and lay light to one side.  
screw out and remove lock cover plate downward.  
screw out.  
unlock at rear and remove.  
Use special tool 140 589 16 63 00.  
screw out (2 each). When installing screws use screw locking agent.  
press off with plastic wedge 110 589 03 59 00 at bottom, front and rear (9 clips); position plastic wedge directly at each clip.

Door liner (5)

starting at front pull upward out of channel while simultaneously pulling door liner (5) away from interior door panel at bottom.

Linkage on interior door actuating mechanism, front

unhook.

Electrical connections on door liner (5)

disconnect and guide wires through.

Door liner (5)

lay to one side.



Before installing the door liner

check vapor seal on interior door panel, replace vapor seal if damaged.

Reinstall


in opposite order.

## Special tools

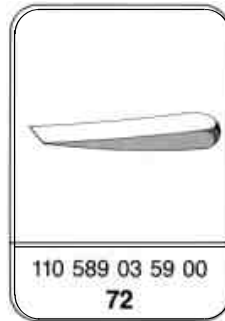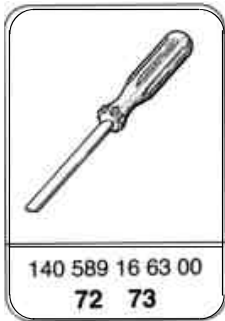


## Removal, installation


- 1 Remove entry light.
- 2 Screw out screws on door liner and lock cover plate (2) and remove.

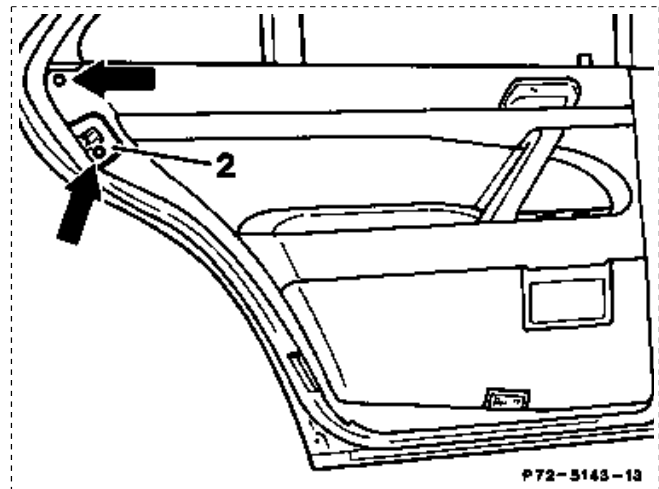


- 3 Unhook wooden cover at rear using special tool 140 589 16 63 00 by inserting blade of special tool between wooden cover and upholstery on door panelling, then pull special tool all the way up.

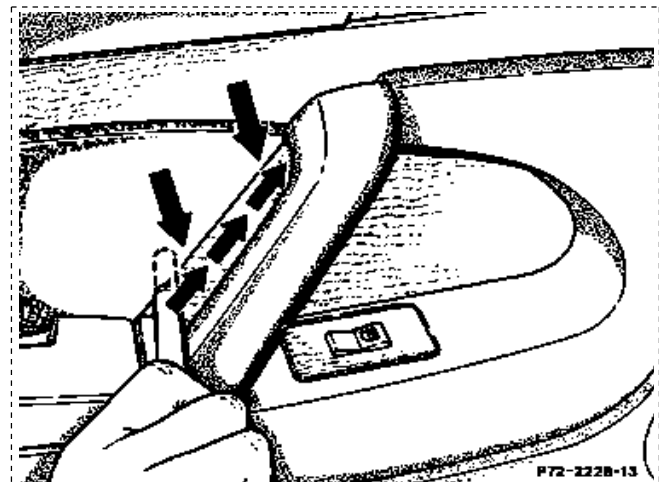

- 4 Tip wooden cover toward inside at top and bottom with special tool.

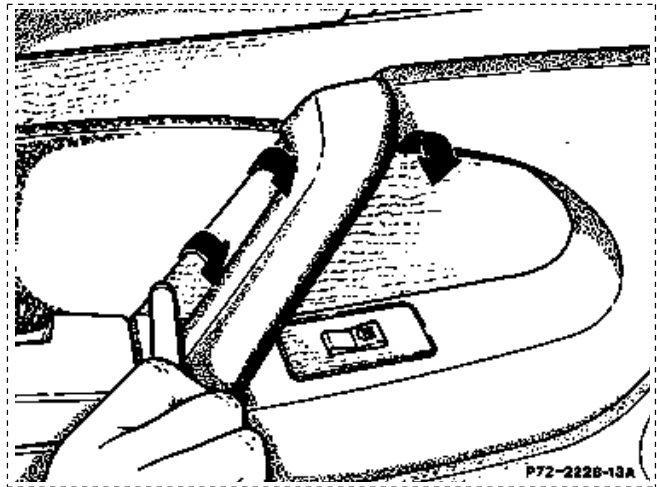


- 5 Remove wooden cover toward front.

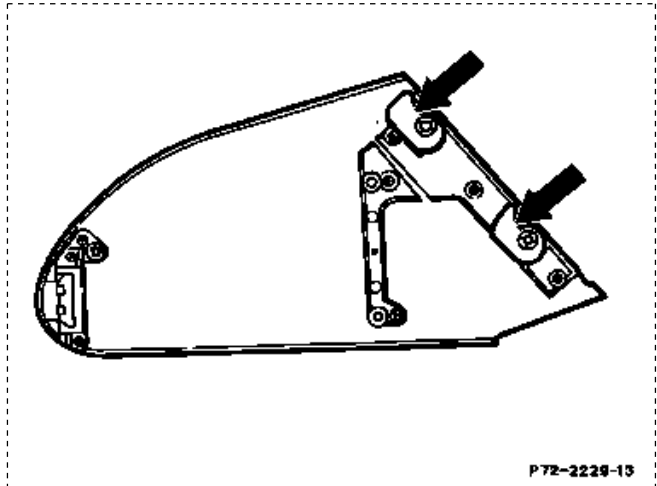


Wooden cover - rear


- 6 Screw out the screw in area of door handle (arrows).

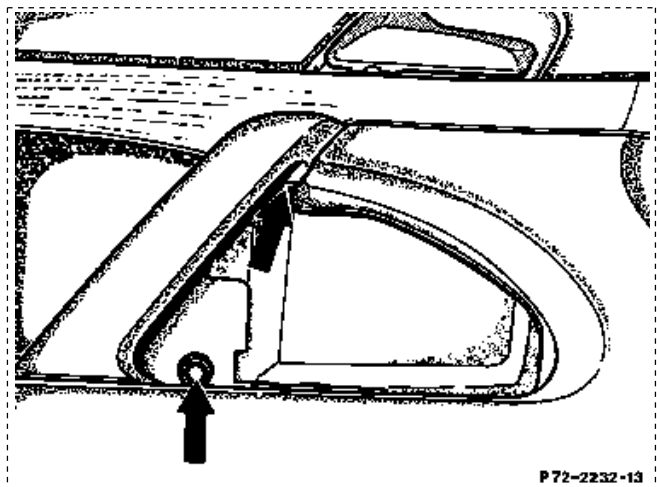

- 7 Press door liner off of interior door panel at bottom, front and rear with plastic wedge 110 589 03 59 00 (9 clips); insert plastic wedge directly at clip.

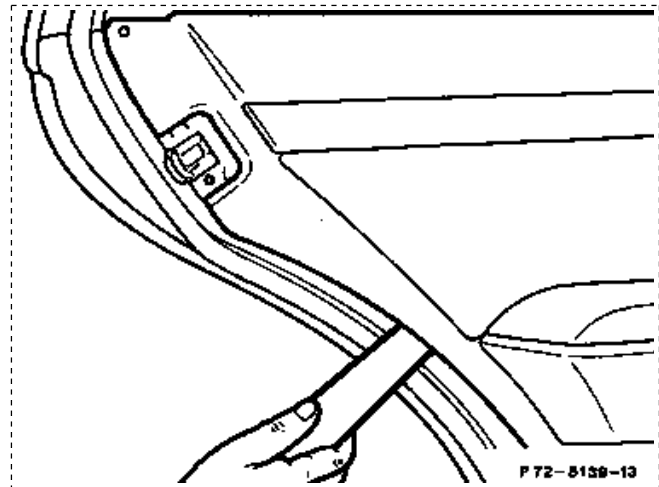


- 8 Beginning at front top remove door liner from channel while simultaneously pulling door liner away from interior door panel at bottom.
- 9 Unhook linkage to interior door actuating mechanism at front.
- 10 Disconnect electrical connections on door liner and guide wires through liner.

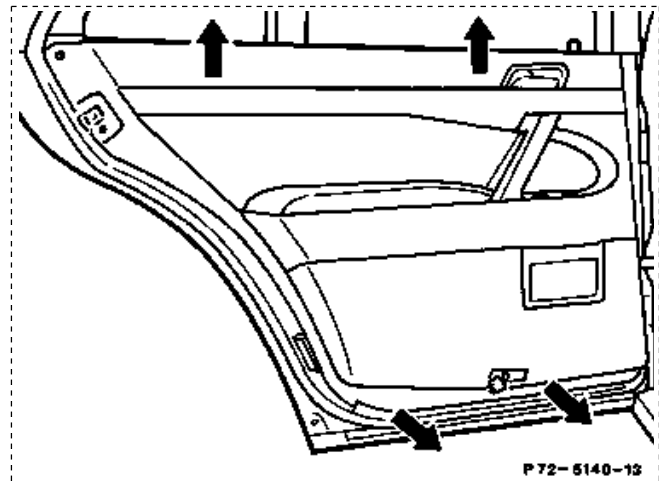

- 11 Lay door liner to side.


- 12 Check vapor seal on interior door panel, replace vapor seal if damaged.

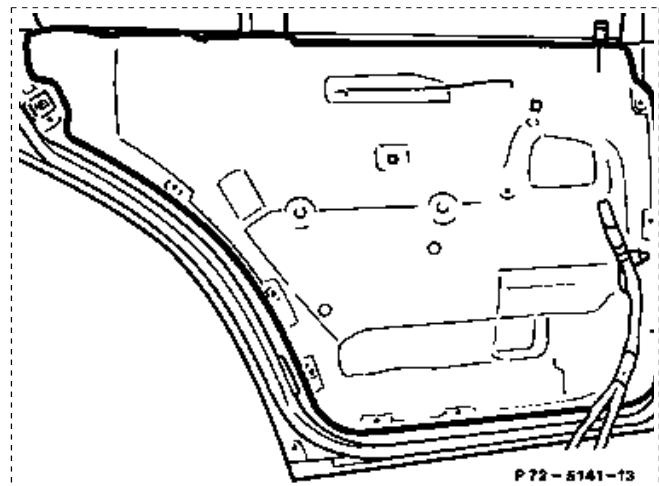


- 13 Complete electrical connections on door liner, guide wires through liner.

- 14 Hook in linkage for interior door actuating mechanism at front.
- 15 Insert lock button into door liner at rear and press door liner into channel in interior sealing bar at top.


- 16 Engage plug-in clips on interior door panel in door liner (9 pieces).
- 17 Screw in the screws in area of door handle (2 each) and tighten.

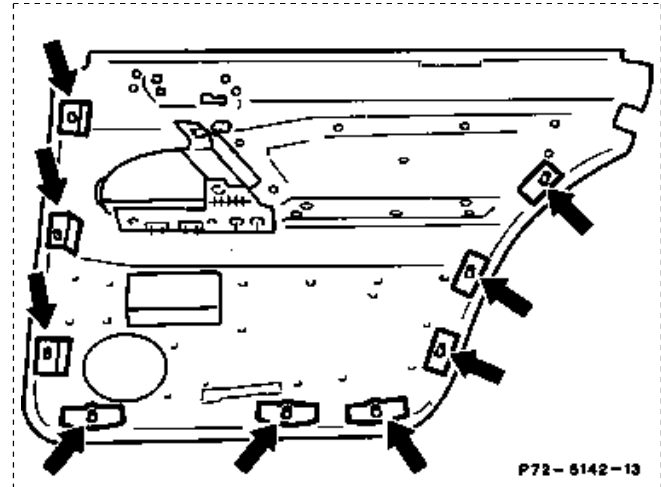

- 18 Install cover plate on door lock and screw down. Screw in screw on door liner (arrows).

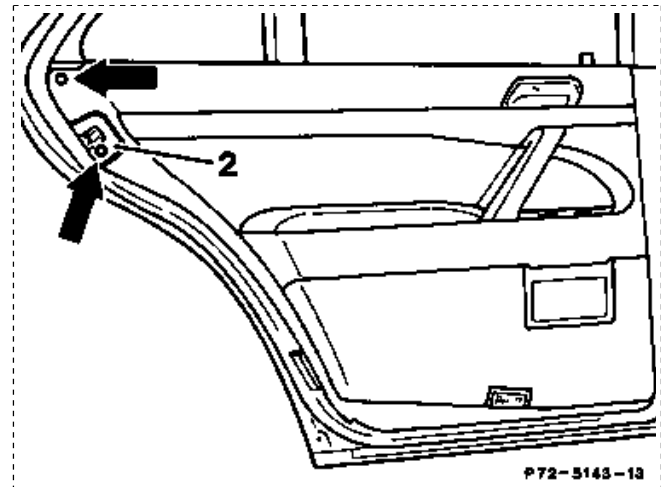


- 19 Install wooden cover; turn both catches to installed position.

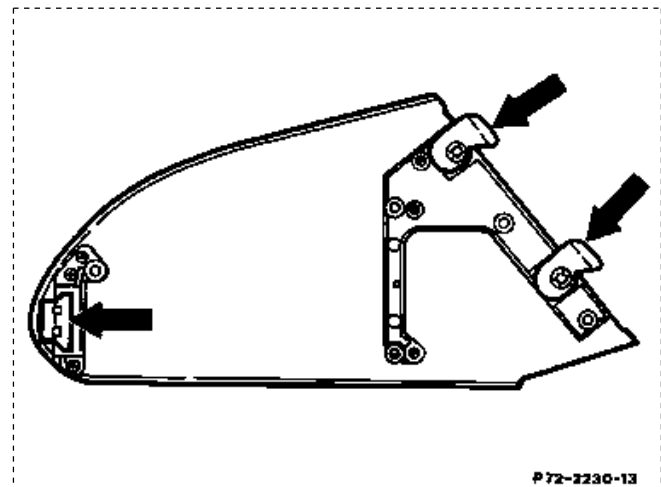

- 20 Insert wooden cover with catches into recess in door covering.

Recess for catches on  
wooden cover

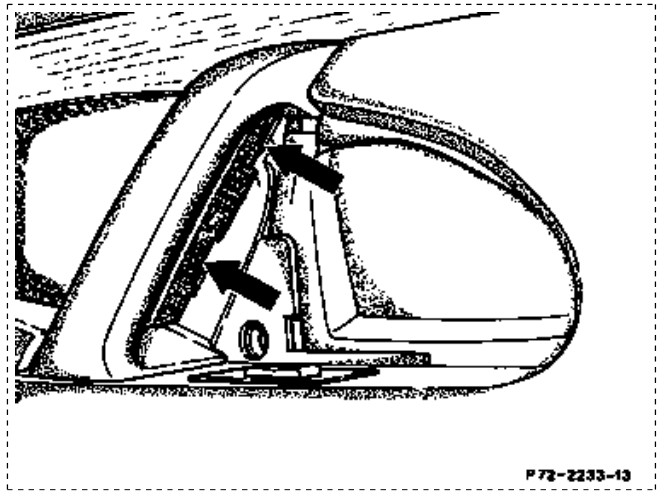

- 21 Press wooden cover forcefully at front to catch.
- 22 Reconnect and install entry light (1).

