






## Heating and Ventilation

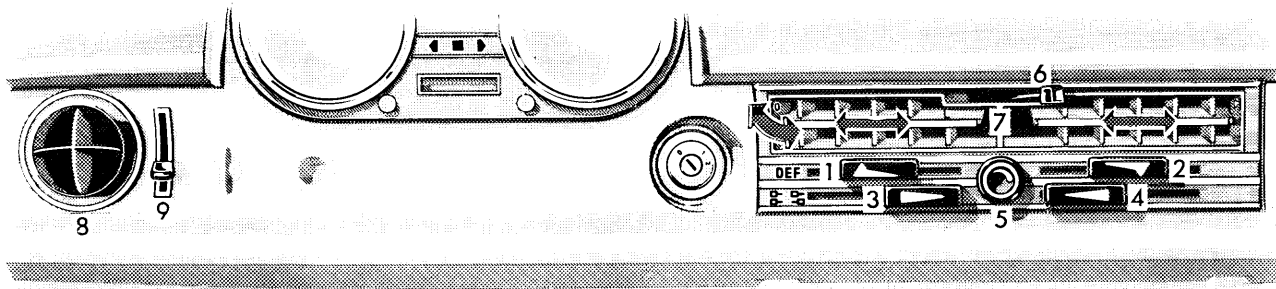

7870

- |  |   |  |
|--|---|--|
| <p>1 <br/>Air to windshield<br/>lever out = open<br/>lever in = closed</p>            | <p>3 <br/>Heater left side<br/>lever out = open = warm<br/>lever in = closed = cold<br/>Levers 1 and 2 should be in the<br/>open position for heating</p>  | <p>5 Blower switch (3-speed)<br/>Turn to the right = on</p>                                    |
| <p>2 <br/>Air to driver and floor area<br/>lever out = open<br/>lever in = closed</p> | <p>4 <br/>Heater right side<br/>lever out = open = warm<br/>lever in = closed = cold<br/>Levers 1 and 2 should be in the<br/>open position for heating</p> | <p>6 Additional fresh air<br/>Lever to the left = open<br/>Lever to the right = closed</p>     |
|  |   | <p>7 Additional fresh air outlet<br/>Outlet frame tilts upwards,<br/>vanes swivel sideways</p> |
|  |   | <p>8 Side ventilation outlet<br/>Eyeballs swivel omnidirectionally</p>                         |
|  |   | <p>9 Side ventilation lever<br/>Up = open<br/>Down = closed</p>                                |