

- 1 Automatic antenna
- 2 Antenna switch
- 3 Radio
- E Retracting position
- A Extending position
- Tipping position (in antenna switch 2)
- Detent position (in antenna switch 2)
- g Fuse automatic antenna (terminal 30)
- h Fuse, radio (terminal 15 R)

