


07.1-8627 Replacing Pressure Valve Seal

Operation no. of operation texts and work units or standard texts
and flat rates: 07-8627

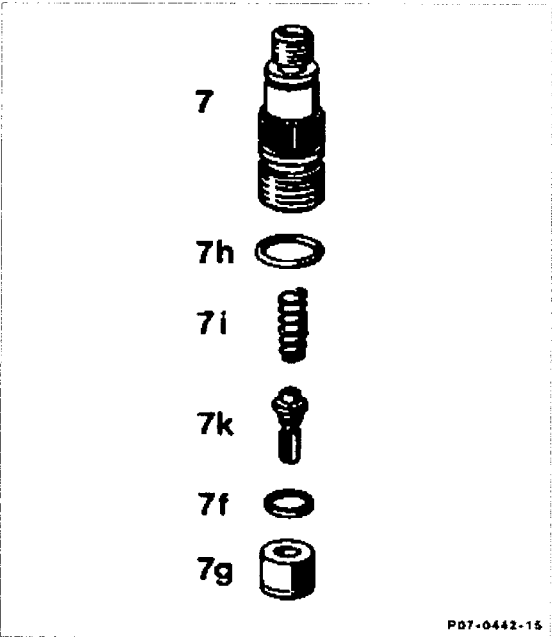

- | | | |
|---|-------|--|
| Pressure valve holder (7) | _____ | tightening torque 35 Nm,
special tool 617 589 01 09 00. |
| Compression spring (7i), copper seal (7f) | _____ | renew. |
| Pressure valve (7k) | _____ | rinse in fuel before installing. |
| Pressure valve carrier (7g) | _____ | pay attention to installed position. |
| O-ring (7h) | _____ | oil before assembling. |

Special tool

