


54-5600 Removing and Installing speedometer shaft (except model 124.034/036)

Preceding work (except models 124.034/036):
Instrument cluster removed (54-6015).

Operation no. of operation texts and work units or standard texts
and flat rates:

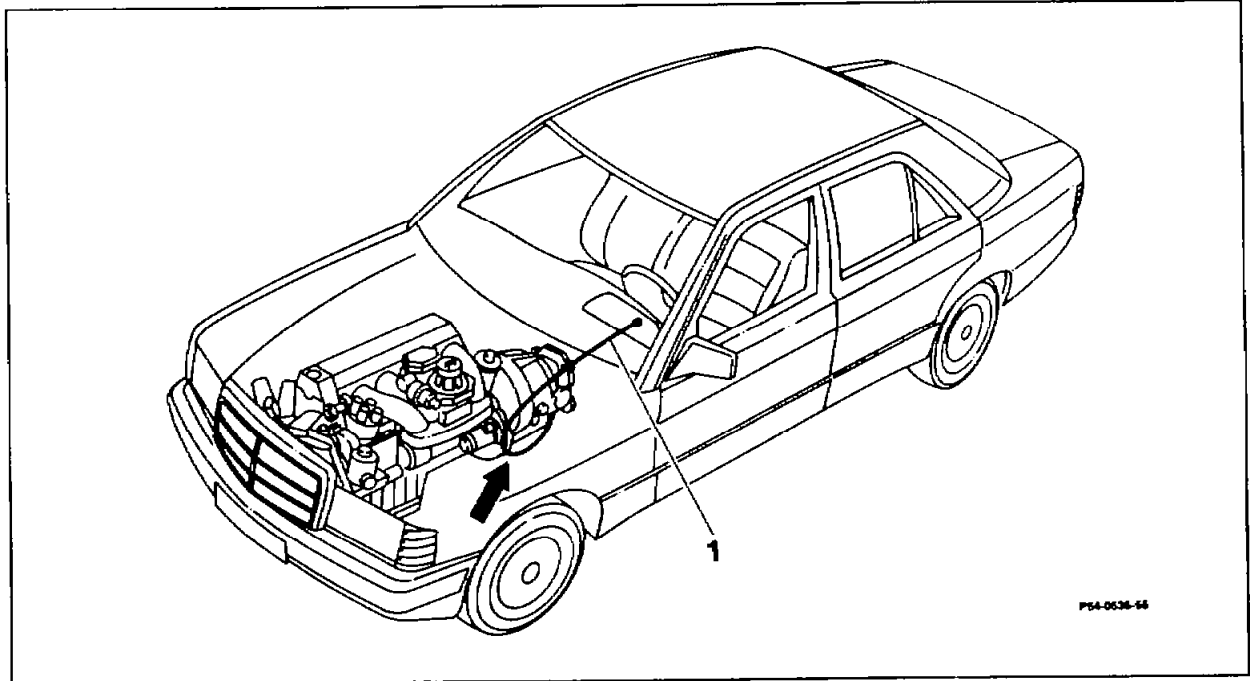

Speedometer shaft (1) at holder (arrow)	unclip, clip in.
Carpet in left footwell	remove, insert.
Speedometer shaft (1) from interior	push through downward, introduce from below.

Note

The speedometer shaft (1) must not be kinked or tensioned.
A guide tube has been installed as of 03/87 in the area below the instrument cluster as an anti-kink protection to facilitate removal and installation.