

72-101 R and R rear door inner trim panel

Removal


1 Remove arm rest with hand grip (72-140).

2 Remove window crank (72-110).

3 Unscrew screws and remove reveal molding.



4 Remove enclosure on door lock.

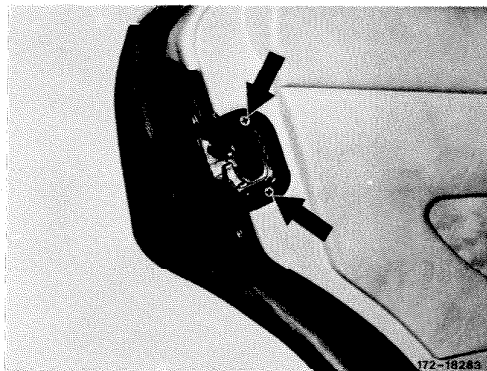


5 Unscrew screw below on door lining.

6 Pull door lining in upward direction and remove.

Attention!

Door lining is hung-on and not clipped-on.

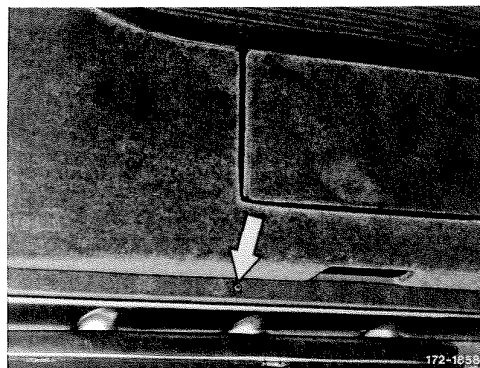

72-101 R and R rear door inner trim panel

Installation

7 For installation proceed vice versa.

Note: If the sealing sheet on inner door panel is damaged, renew prior to installing door lining.