

41-100 R and R center bearing


Note

On vehicles up to 07/82, remove locking ring (5) and remove together with front protective cap (6).

Installation note

Insert locking ring (5) into groove of fork-type joint in such a manner that the protective cap rests against bearing inner race.

The inner hump of the locking ring points toward protective cap.

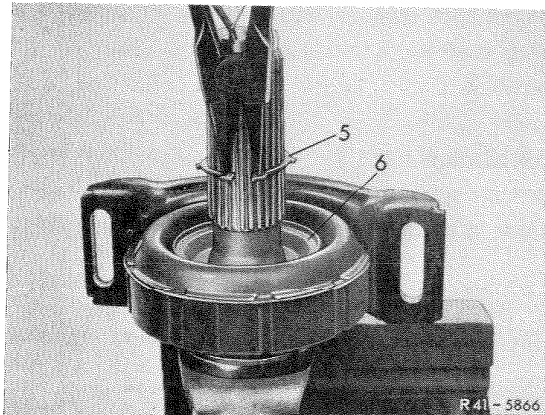


R41-5866

5 On vehicles starting 08/82, pull rubber mount, grooved ball bearing and protective cap together from fork-type joint by means of two-legged puller 000 589 88 33 00 and pulling legs 116 589 03 33 00.

Note


On vehicles starting 08/82, the grooved ball bearing is secured by the protective cap.

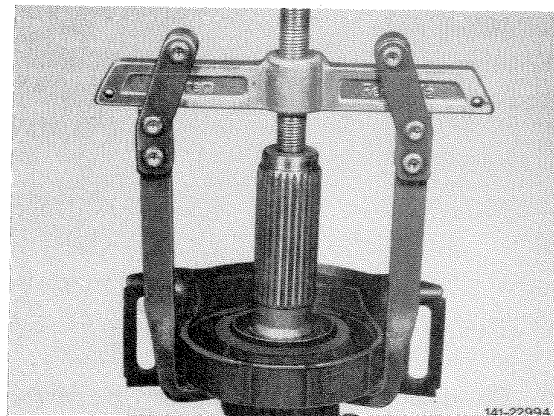

141-22994

Installation note

Press rubber mount by means of pressing-on sleeve (3) 126 589 03 15 00 onto fork-type joint, while paying attention to correct location of V-fold.

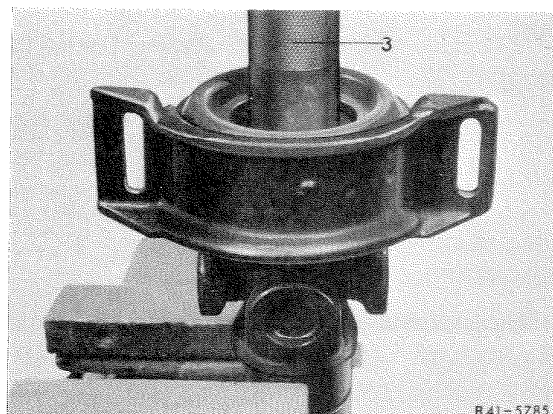

R41-5785


R41-5785

41-100 R and R center bearing

6 Install rubber mount with inner V-fold. Install rubber mount in such a manner that the inner V-fold points toward universal joint.

1st version up to 07/82

- 1 Front drive shaft
- 2 Rear drive shaft
- 3 Clamping nut
- 4 Rubber sleeve
- 5 Locking ring
- 6 Protective cap
- 7 Drive shaft intermediate bearing
- 8 Grooved ball bearing
- 9 Fork-type joint
- 15 Universal joint star with needle bearing and bushings
- 16 Frame floor
- 17 Drive shaft tunnel

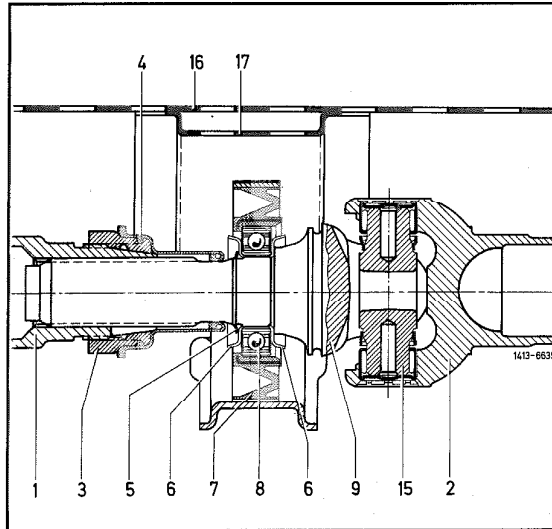


1413-6639

7 Mount self-locking protective cap (on vehicles starting 08/82) with pressing-on sleeve 126 589 03 15 00 making sure that the protective cap rests against grooved ball bearing (8) (cutout in Fig.).




Use pressed-on protective cap only once.

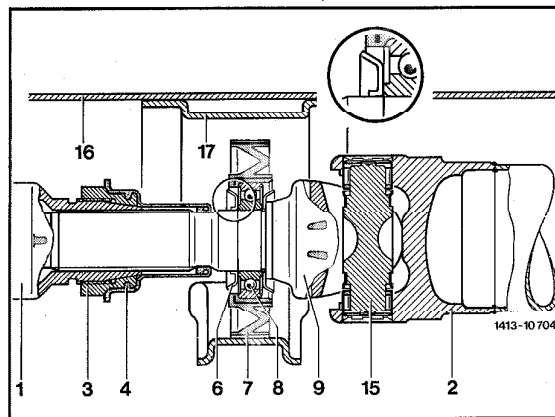

1413-10704

8 Remove rear protective cap (arrow) from fork-type joint.

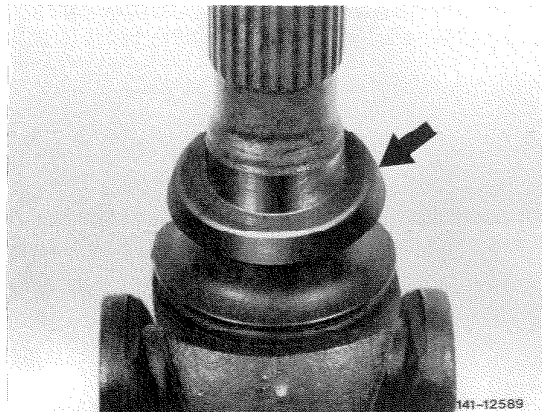

141-12589


141-12589

41-100 R and R center bearing

Replacing grooved ball bearing

9 Press grooved ball bearing (8) with removing and pressing-in tool (04) 116 589 09 43 00 out of rubber mount (7).

10 Check rubber mount and grooved ball bearing for wear and replace parts, if required.

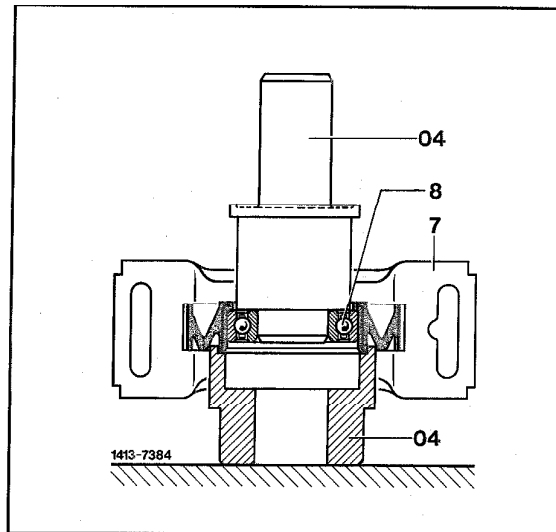


1413-7384

11 Press grooved ball bearing (8) into rubberized bearing seat up to contact surface (arrows).

Note

Pay attention to correct seat of grooved ball bearing.

12 For further installation proceed vice versa starting at step 8.

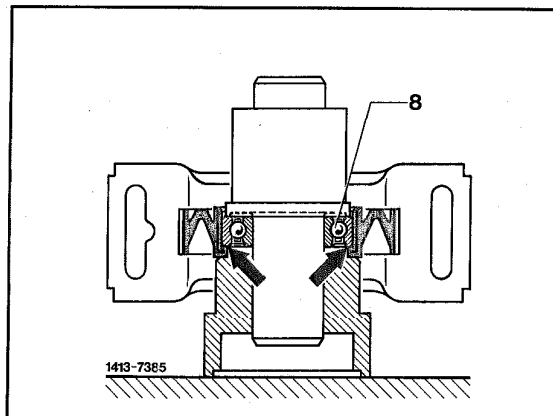

1413-7385