
AR33.20-P-0440-01GH	Pressing out and attaching supporting joint at	
AK33.20-P-0440-01GH	Pressing out and attaching supporting joint at	
	steering knuckle	

n Wheel location, hub


Number	Designation	Model Series 163
BA33.20-P-1003-01D	Locking slotted nut, supporting joint to NM steering knuckle	300

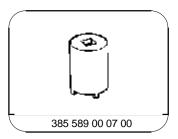

Prong wrench

Remove


1 Push supporting joint (7) out of steering knuckle using suitable tool.

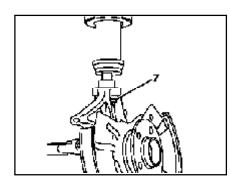

P33.20-0428-01

Install

- 2 Insert supporting joint (7) and attach locking grooved nut (7j) \mathbf{n} .
- 3 Pull in supporting joint (7) I using claw-type wrench (044) until it abuts.

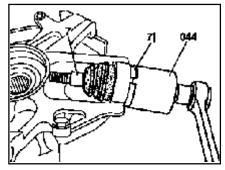

P33.20-0426-01