

Item	Designation	Coordinates
<b>A1</b>	Instrument cluster	8L
<b>A16x1</b>	Knock sensors connector	29K
<b>F1</b>	Fuse and relay box	9L 21L
<b>F1f6</b>	Fuse 6	10K
<b>F1fB</b>	Fuse B	21K
<b>M1</b>	Starter	27L
<b>M3</b>	Fuel pump assembly	4L
<b>M3m1</b>	Fuel pump 1	3L
<b>M3m2</b>	Fuel pump 2	4L
<b>N3</b>	Injection system control unit	6L
<b>N4/1</b>	EA/CC/ISC [EFP/TPM/LLR] control unit	19L
<b>N7</b>	Lamp monitoring unit	17L
<b>N16</b>	Engine systems control unit (ESCU [MAS])	4A 12A 20A 27A
<b>N30/1</b>	ABS/ASR control module	23L
<b>N51</b>	ADS/suspension control unit	22L
<b>N52</b>	Power soft top control unit	24L
<b>S2/1</b>	Ignition/starter switch	25L
<b>S16/1</b>	Starter lock-out and back-up lamp switch	15L
<b>S16/6</b>	Kickdown switch	12L
<b>S16/8</b>	Transmission mode 'B' engagement switch	10L
<b>W16</b>	Ground (assembly compartment)	2E 29G
<b>W17</b>	Ground (right rear seat)	4E
<b>X2/3</b>	ABS/engine vehicle speed signal connector (2-pin)	24H
<b>X4</b>	Circuit 30 terminal block, fuse and relay box/interior (2-pin)	25H 27H
<b>X4/10</b>	Circuit 30/30Ü/61e/87L terminal block (6-pin)	1H
<b>X11/4</b>	Data link connector	5E
<b>X22/2</b>	Automatic transmission/engine connector (8-pin)	12E
<b>X26</b>	Interior/engine connector (12-pin)	8H
<b>X26/12</b>	Interior/transmission connector	10H 14E
<b>X27</b>	Starter wiring harness connector (5-pin)	26H

<b>X30/1</b>	Multifunction block connector (for further systems see connection diagram group 00-C)	18G
<b>X36</b>	Fuel pump wiring harness connector (1-pin)	3E
<b>X36/3</b>	Fuel pump wiring harness connector (2-pin)	3H
<b>Y3</b>	Automatic transmission (AT [AG]) kickdown valve	11L
<b>Y32</b>	Air pump switchover valve	28L
<b>Y33</b>	Electromagnetic AIR pump clutch	29L