


## 05-3350 Removing and installing guide rails at top of cylinder head

Preceding work:

Valve covers removed (01-0500).

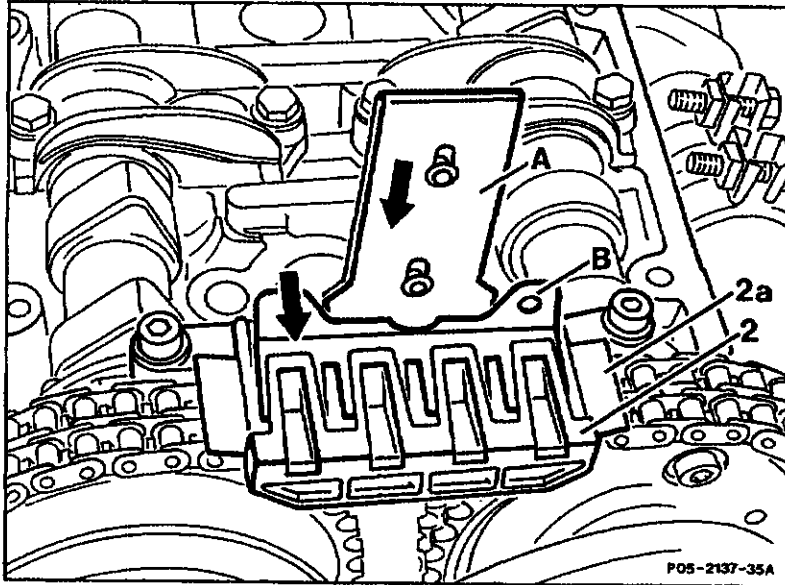

Release device (B) .....	insert into top detents, special tool 119 589 01 63 03 (step 1).
Pusher (A) .....	fit onto the rail, special tool 119 589 01 63 00 (steps 2 to 3).
Pusher (A) .....	push down (step 4).
Front part of guide rail (2) .....	take off.
Guide rail (2a) with rubber gasket .....	unbolt, bolt on (9 Nm).

### Special tools

