

AP18.00-P-0101-06T	Replace oil filter element, drain oil filter		
--------------------	--	--	--

Nm Oil filter

Number	Designation	Engine
		271
BA18.20-P-1001-011	Threaded cap to oil filter housing	Nm 25

- 1 Remove and remove threaded cap (1).
i To catch the dripping oil, use an oil receptacle.
 Drain pan
gotis://S_18.1_08.0
- 2 Remove oil filter element (2) from threaded cap (1).
- 3 Replace sealing rings (3).
- 4 Push new oil filter element (2) onto screw cap (1).
- 5 Mount and tighten threaded cap (1) Nm

