188	
189	
190	
191	
192	
193	
194	
195	
196	
197	
198	
199	
200	200 - anti-freeze filling (from 01.02.1968 up to 30.04.1973)
201	201 - owner's manual and maintenance booklet, RSA (from 01.01.1972 up to 31.07.1982)
	202 - owner's manual and maintenance hooklet 1) (from 01.12.1021)
	5 The S mandar and manucipalice booklet 11 (from 01.17.1971)
	202 - running-in instructions German (customer service edition + operating instructions) (from 01.02.1963 up to 28.02.1963)
	• 202 - reference plate, coolant 1)
202	202 - reference plate, coolant ()
	• 202 - reference plate, folding top operation 1)
	1 202 reference plate, the pressure and folding top operation (from 01.09.1963 up to 30.11.1071)
	202 - tire pressure instructions 1)
	<ul> <li>203 - owner's manual and maintenance booklet for the USA 2) (from 01.11.1971 up to 30.06.1978)</li> </ul>
203	203 - reference plate, coolant 2)
204	204 - rear axle ratio 1:4,10 (km) (from 01.02.1963 up to 31.08.1965)
	<ul> <li>205 - owner's manual and maintenance booklet 2) (from 01.11.1971)</li> </ul>
205	<ul> <li>205 - rear axle ratio 1:4,10 (m) (from 01.02,1963 up to 31.08,1965)</li> </ul>
203	205 - reference plate, coolant 2)
	206 - owner's manual and maintenance booklet 5) (from 01.01.1972)
206	<ul> <li>206 - reference plate, folding top operation - in Italian (from 01.04.1963 up to 28.02.1968)</li> </ul>
200	206 - reference plate, coolant 3)
	207 - owner's manual and service booklet 3) (from 01.03.1968)
	• 207 - running-in instructions (6-cylinder) - French (from 01.02.1963 up to 28.02.1963)
207	• 207 - reference plate, folding top operation, in Ferral (form 01.02.1963 up to 28.02.1963)
207	<ul> <li>207 - reference plate, folding top operation - in French (from 01.04.1963 up to 28.02.1968)</li> <li>207 - tire pressure instructions 3)</li> </ul>
	= 27 the pressure instructions 5)
	208 - owner's manual and service booklet, in Romance
	208 - owner's manual and service booklet - in Spanish (from 01.03.1968)
	208 - owner's manual and maintenance booklet 4)
	208 - running-in instructions (6-cylinder) - Spanish (from 01.02.1963 up to 28.02.1963)
208	208 - reference plate, folding top operation - in Spanish (from 01.02.1963 up to 28.02.1963)
	<ul> <li>208 - reference plate, folding top operation - in Spanish (from 01.04.1963 up to 28.02.1968)</li> <li>208 - reference plate, coolant 4)</li> </ul>
	208 - tire pressure instructions 4)
	- 200 - the pressure instructions 4)
	209 - owner's manual and service booklet, in Romance
	<ul> <li>209 - owner's manual and service booklet - in Portuguese (from 01.07.1970)</li> </ul>
209	<ul> <li>209 - owner's manual and maintenance booklet 6)</li> </ul>
209	<ul> <li>209 - running-in instructions - Portuguese (from 01.02.1963 up to 30.06.1970)</li> </ul>
	• 209 - reference plate, coolant 4)
	. , ,