


Cruise Switch
 B=accel (Beschl. Fix)
 V=decel (Verzog Fix)
 A=cancel (Aus)
 SP=resume (Speicher)

A and +12V are electrically connected UNLESS A is selected (normally closed)

All others are connected to +12V only when selected (normally open)

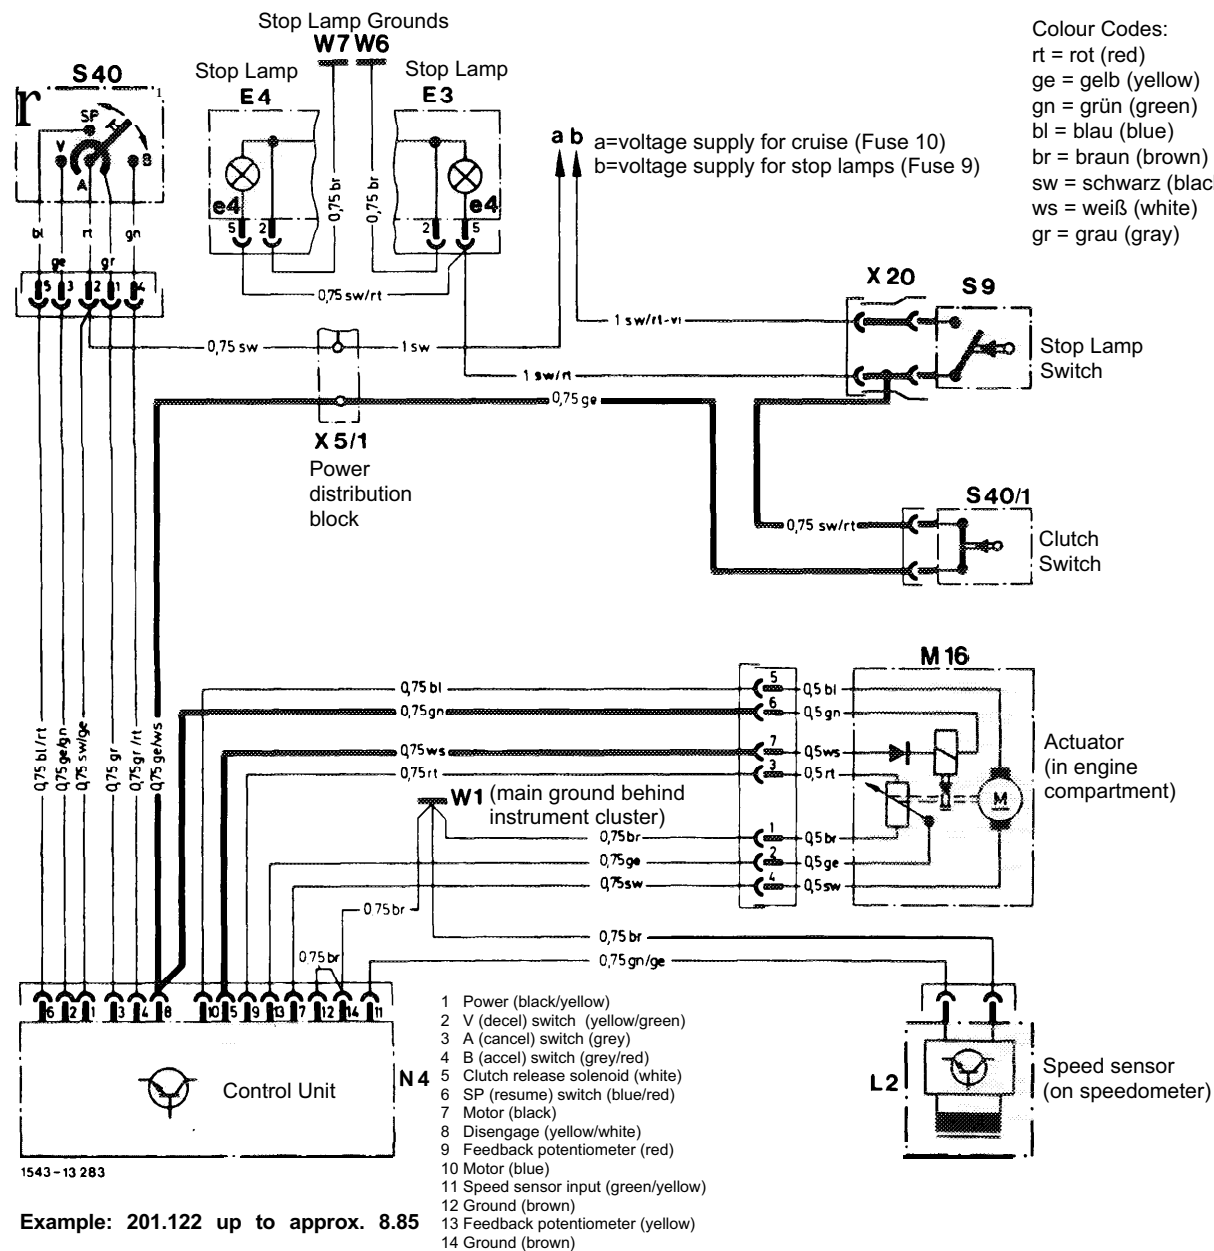

Example: 201.122 up to approx. 8.85

M16 Actuator cruise control/Tempomat
 N4 Control unit cruise control/Tempomat
 S9 Stop lamp switch
 S40/1 Switch clutch pedal cruise control/Tempomat