

7 Push door handle to the rear, making sure that the driving pin engages in door lock.

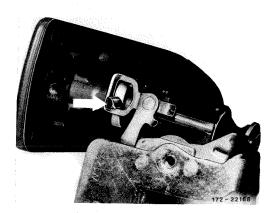

Note: The clearance between driving pin and counterpart on door lock should amount to approx. 1 mm. Adjustment is made at hex. screw (arrow).

8 Screw down door handle and push-in sealing frame in range of door handle.

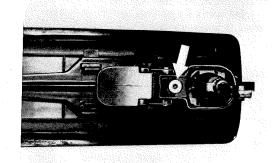

172 - 2216