

CV Joint Boot Kits

UNI-FIT™


Guaranteed to always have the right boot on hand.



- Two Uni-Fit™ CV Boot Kits can be installed with one tool on 95% of all vehicles
- Uni-Fit™ CV Boot Kits include grease, clamps and boots - all which are needed to do the job right the first time
- Air powered “On-the-Car” Installation Tool **saves up to 40 minutes** over conventional CV Boot installation
- No need to remove the half-shaft or disassemble the joint to replace the CV Boot



Prevent a Breakdown: Failed CV Boots can lead to a failed axle.

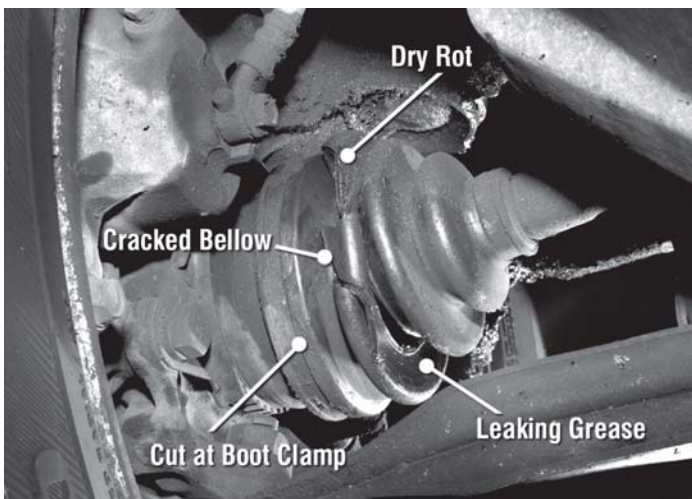

Tech Tip

- Inspect all suspension components including CV Boots every time the vehicle is in for service.
- Grease on the suspension, spindle and caliper indicates a ruptured boot.
- Replace the torn CV Boot as soon as possible to prevent contaminants from entering the joint and ruining it.
- Do not leave a kink in the boot bellows after installation. The boot will fail prematurely.
- Always use the proper tools when removing and installing CV Boots.
- DO NOT use an impact gun to install the retaining nut on the axle. Damage to the joint and/or bearing may occur.

Activant Path

**C.V. JOINTS & U JOINTS/
U & CV JOINTS, &
DRIVESHAFT**

Activant Code

**DDW/
DQB/
DQC**

**Applications begin
on page 59.**

Window
Lift Motors
pg. 535-554

Window
Regulators
pg. 555-566

Wiper
Motors
pg. 567-572

Wiper Transmission
Linkages
pg. 573-576

**Uni-Fit™ CV Boot System reduces
labor time and boosts profits!**

CV Joint Boot Kits

UNI-FIT™ CV Joint Boot Installation Tools

- Stretch our Uni-Fit CV Joint Boots to a diameter of up to 4.5" to slide the boot over the CV joint
- No need to remove the half-shaft or disassemble the joint to replace the CV Boot
- Boost profits by reducing labor time—Saves up to 40 minutes over conventional CV Boot installation



614-030 Uni-Fit™ CV Boot Air Tool

- Air powered “On-the-Car” Installation Tool works exclusively with **Neoprene** Uni-Fit CV Boots for installation on 90% of all applications.
- Simple single-button operation expands the CV boot in seconds to fit over the CV joint.
- Air compressor required; tool fits a 1/4" NPT air hose nipple.
- Each tool supplied with an Industrial Milton 1/4" body 1/4" NPT air hose nipple and an instruction sheet.
- Dorman Two Year Limited Warranty



614-050 Uni-Fit™ “On-The-Car” Installation Tool Kit

- Economical “On-the-Car” Installation Tool works exclusively with Neoprene and Silicone Uni-Fit CV Boots.
- No air compressor needed.
- Each Kit includes: Installation Tool, 4" & 5" Mounting Cones, Deluxe Banding Tool, Cutting Knife, Lubrication Spray and Instructions. Packaged in a durable utility box.
- Dorman Limited Lifetime Warranty



UNI-FIT™ CV Joint Boot Kits

- Each Kit Includes: CV Boot, 3 oz. Pack of Grease, 2 Clamps and Instructions.
- Reduce stocking inventory - Four SKUs replace over 350 OEM style replacement boots - 95% of all front, rear, or all wheel drive applications for both outer and inner CV joints.
- Eliminate missed applications - Coverage where no Aftermarket boot is available.
- Correct boot always on hand - No waiting for parts delivery or being sent the wrong boot kits.
- Stretch to fit most applications - Only CV Boot that can be installed over the CV joint and retain its original durometer and shape. Can also be installed in the traditional method with joint disassembly or shaft removal.
- Proprietary rubber blend and patented design offer maximum durability and life. Boots stay flexible in winter and are resistant to cuts and abrasions.

Neoprene Rubber CV Joint Boot Kits

- For installation using the traditional method, the Dorman Uni-Fit "On-the-Car" Installation Tool Kit, or the Dorman Uni-Fit CV Boot Air Tool.



614-001

Uni-Fit™ CV Boot Kit

This Neoprene Boot provides coverage for outer joints up to 3.58" in diameter.



614-003

Uni-Fit™ CV Boot Kit

This Neoprene Boot provides coverage for outer joints larger than 3.58" in diameter commonly found on pickups, SUVs, luxury, and sport vehicles.



614-012

Uni-Fit™ CV Boot Kit Bulk Pack

Box of supplies to complete 12 CV Boot installations. Contains 12 **614-001** Neoprene Boots that fit outer joints up to 3.58", 12 (3 oz.) Packs of Grease, 24 Clamps, and Instruction Sheet.

Silicone Rubber CV Joint Boot Kits

- For installation using the traditional method.
- Designed specifically for inner joints where the CV Boot is exposed to high temperatures.



614-002

Uni-Fit™ CV Boot Kit

This Silicone Boot provides coverage for inner joints up to 3.58" in diameter where the CV boot is exposed to high temperatures.




614-004

Uni-Fit™ CV Boot Kit

This Silicone Boot provides coverage for inner joints larger than 3.58" in diameter where the CV boot is exposed to high temperatures.

UNI-FIT™ CV Joint Accessories & Hardware

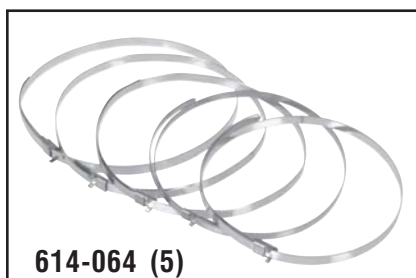

614-064 (5)

Heavy-Duty Stainless Steel Clamps

- OE quality, "free-end" style
- Ideal for clamping Uni-Fit™ CV Joint Boots
- Rounded edges and smooth surfaces
- 450 pound loop tensile strength
- HD 1/4" x 19"
- Same clamp that is used in Uni-Fit CV Joint Boot Kits. Carded, 5 per.



614-072

Uni-Fit™ Deluxe Banding Tool

- High strength construction
- Convenient tensioning ratchet with integrated band cutter
- Ideal professional quality tool for tightening Heavy Duty clamps used for Uni-Fit CV Joint Boots.



03618

CV Joint Grease

- Fortified with anti-wear agent molybdenum disulfide.
- One joint supply (3 oz) in a squeezable tube.
- Can be used for wheel bearings, ball joints, U-joints, hinged parts, cables, chassis parts, and general automotive applications.
- Excellent mechanical stability, heat resistance, and high compatibility with other grease.



Tech Tip

- Inspect all suspension components including CV Boots every time the vehicle is in for service.
- Grease on the suspension, spindle and caliper indicates a ruptured boot.
- Replace the torn CV Boot as soon as possible to prevent contaminants from entering the joint and ruining it.
- Do not leave a kink the boot bellows after installation. The boot will fail prematurely.
- Always use the proper tools when removing and installing CV Boots.
- DO NOT use an impact gun to install the retaining nut on the axle. Damage to the joint and/or bearing may occur.

Increase Customer Satisfaction and Loyalty!



Maintenance Checklist

- ☒ Change Oil
- ☒ Inspect CV Boot
- ☒ Check Belts
- ☒ Check Hoses
- ☒ Grease Chassis



Sales Tip

Ask the customer about the condition of the axle/spindle nuts whenever selling CV Joint Boot Kits. This is an ideal time to inspect and replace these parts. Refer to Dorman® AutoGrade™ Hardware Catalog, DAG2006.

**Save Your Customers Money on Repairs...
REPLACE THE CV BOOT ONLY!**

CV Joint Boot Kits

CV Joint Boot Kit Applications

Make/ Model/Years	Description	Dorman Uni-Fit Outer	Dorman Uni-Fit Inner
ACURA			
CL			
2003-97	-	614-003	614-004
INTEGRA			
2001-86	-	614-001	614-002
LEGEND			
1995-86	-	614-003	614-004
NSX			
2003-91	-	614-003	614-004
RL			
2003-96	-	614-003	614-004
RSX			
2003-02	-	614-001	614-002
TL			
2005-04	AT, RH	614-003	—
2003-95	-	614-003	614-004
VIGOR			
1994-92	-	614-003	614-004
AM GENERAL			
HUMMER			
1999-95	-	614-003	614-002
AMERICAN MOTORS			
EAGLE			
1988-85	Exc. Limited Series	614-001	614-004
1988-85	Limited Series	614-003	614-002
1984-83	4-Cyl Eng	614-001	614-004
1984-83	6-Cyl Eng	614-003	614-002
1982-80	-	614-001	614-004
SPIRIT			
1983	-	614-003	614-002
1982-80	-	614-001	614-004
ASUNA			
SE, GT			
1994-92	-	614-001	614-002
SUNFIRE			
1995-93	-	614-001	614-002
SUNRUNNER			
1995-93	-	614-001	614-002
AUDI			
80, 90			
1992-88	Front	614-001	614-002
1992-88	Rear	614-001	614-002
100			
1995	Front	614-003	614-004
1994-92	Front	614-003	614-004
1994-92	Rear	614-001	614-002
1991-89	Front, AT, 3-Speed	614-001	614-002
1991-89	Front, Exc. AT, 3-Speed	614-001	614-002
1991-89	Rear	614-001	614-002
1977-68	-	614-001	614-002
200			
1991-88	Front	614-003	614-004
1991-88	Rear	614-001	614-002
4000			
1983-80	From VIN 81D077974	614-001	614-002
4000CS QUATTRO			
1987-86	Front	614-001	614-002
1987-86	Rear	614-003	614-004
4000S			
1987-83	-	614-001	614-002
4000S QUATTRO			
1985-84	Front	614-001	614-002
1985-84	Rear	614-003	614-004
5000			
1985-84	-	614-001	614-002
1983-82	w/Turbo	614-003	614-004
1983-82	wo/Turbo	614-001	614-002
1981-75	-	614-001	614-002
5000CS			
1988-86	AT	614-001	614-002
5000CS QUATTRO			
1988-86	Front	614-003	614-004
1988-86	Rear	614-003	614-004
5000S QUATTRO			
1988-87	Front	614-003	614-004
1988-87	Rear	614-003	614-004
5000S TURBO			
1985-84	-	614-003	614-004
A4, A6, A8			
2003-96	-	614-001	614-002
CABRIOLET			
1999-94	-	614-001	614-002

Make/ Model/Years	Description	Dorman Uni-Fit Outer	Dorman Uni-Fit Inner
AUDI (continued)			
COUPE QUATTRO			
1987-85	Front	614-001	614-002
1984-82	Front	614-001	614-002
1984-82	Rear	614-001	614-002
COUPE, GT			
1987-81	From VIN 85H026077	614-001	614-002
FOX			
1979-73	-	614-001	614-002
QUATTRO			
1985-83	Front	614-001	614-002
1985-83	Rear	614-003	614-004
S4, S6			
1996-92	-	614-001	614-002
V8 QUATTRO			
1994-90	-	614-001	614-002
BMW			
318i			
1985-83	-	614-001	614-001
318i, 318iC, 318iS			
1993-90	-	614-001	614-001
325, 325e, 325i, 325iC, 325iS			
1988-83	-	614-001	614-001
325iX			
1990-89	Rear	614-001	614-001
524td			
1991-82	-	614-001	614-001
528e			
1988-82	-	614-001	614-001
528i			
1991-82	-	614-001	614-001
530i			
1991-82	-	614-001	614-001
533i			
1984-82	-	614-001	614-001
535i			
1990-85	-	614-001	614-001
633CSi			
1984-83	-	614-001	614-001
635CSi			
1988-85	-	614-001	614-001
733i			
1984-82	-	614-001	614-001
735i, 735iL			
1993-85	-	614-001	614-001
740i, 740iL			
1993	-	614-001	614-001
750iL			
1993-88	-	614-001	614-001
M3			
1991-87	w/ABS	614-001	614-001
M5			
1991-88	-	614-001	614-001
M6			
1988-87	-	614-001	614-001
BUICK			
CENTURY			
2005-97	-	614-003	614-004
1996-95	-	614-003	614-004
1994	-	614-003	614-004
1993-89	4-Cyl Eng	614-001	614-002
1993-89	6-Cyl Eng	614-003	614-004
1988	4-Cyl Eng, Exc. Heavy Duty Brakes	614-001	614-002
1988	4-Cyl Eng, Heavy Duty Brakes	614-003	614-004
1988	6-Cyl Eng	614-003	614-004
1987-85	Exc. Heavy Duty Brakes	614-001	614-002
1987-85	Heavy Duty Brakes	614-003	614-004
1984-83	Exc. Heavy Duty Brakes	614-001	614-004
1984-83	Heavy Duty Brakes	614-003	614-004
1982	-	614-001	614-004
ELECTRA			
1990-85	-	614-003	614-004
LACROSSE			
2006-05	3.8L Eng	614-003	614-004
LESABRE			
2005-86	-	614-003	614-004
PARK AVENUE			
2005-91	-	614-003	614-004
RAINIER			
2006-04	4WD	614-003	614-004
REATA			
1991-88	-	614-003	614-004

CV Joint Boot Kit Applications

Make/ Model/Years	Description	Dorman Uni-Fit Outer	Dorman Uni-Fit Inner
BUICK (continued)			
REGAL			
2004-88	-	614-003	614-004
RENDEZVOUS			
2006-02	-	614-003	614-004
RIVIERA			
1999-79	-	614-003	614-004
SKYHAWK			
1989-87	-	614-001	614-002
1986	AT	614-001	614-002
1986	MT, w/Turbo	614-003	614-004
1986	MT, wo/Turbo	614-001	614-002
1985	AT	614-001	614-002
1985	MT, w/Turbo, 4-Speed	614-003	614-004
1985	MT, wo/Turbo, 4-Speed	614-001	614-002
1984	AT	614-001	614-004
1984	MT, w/Turbo	614-003	614-004
1984	MT, wo/Turbo	614-001	614-004
1983-82	-	614-001	614-004
SKYLARK			
1999-96	-	614-003	614-004
1995-94	AT	614-001	614-002
1993-92	w/16" Wheels	614-003	614-004
1993-92	wo/16" Wheels	614-001	614-002
1991-88	-	614-001	614-002
1987-86	AT	614-001	614-002
1987-86	MT	614-003	614-004
1985	-	614-001	614-002
1984	4-Cyl Eng	614-001	614-004
1984	6-Cyl Eng	614-001	614-002
1983-80	-	614-001	614-004
SOMERSET			
1987-85	AT	614-001	614-002
1987-85	MT	614-003	614-004
CADILLAC			
ALLANTE			
1993-87	-	614-003	614-004
CIMARRON			
1988-87	AT	614-001	614-002
1988-87	MT	614-003	614-004
1986	AT	614-001	614-002
1986	MT, 4-Speed	614-003	614-004
1986	MT, 5-Speed	614-001	614-002
1985	-	614-001	614-002
1984	Hard Plastic Joint Seals	614-001	614-002
1984	Soft Rubber Joint Seals	614-001	614-004
1983-82	-	614-001	614-004
COMMERCIAL CHASSIS			
2001-91	-	614-003	614-004
CONCOURS			
1999-94	-	614-003	614-004
DEVILLE			
2005-85	-	614-003	614-004
ELDORADO			
2002-67	-	614-003	614-004
ESCALADE			
2006-99	-	614-003	614-004
FLEETWOOD			
1991-85	-	614-003	614-004
SEVILLE			
2005-80	-	614-003	614-004
CHEVROLET			
BERETTA			
1996-95	4-Cyl Eng	614-001	614-002
1996-95	6-Cyl Eng	614-003	614-004
1994	4-Cyl Eng, 2.2L	614-001	614-002
1994	4-Cyl Eng, 2.3L	614-003	614-004
1994	6-Cyl Eng	614-003	614-004
1993-92	4-Cyl Eng, 2.2L	614-001	614-002
1993-92	4-Cyl Eng, 2.2L	614-003	614-004
1993-92	6-Cyl Eng, w/AT	614-001	614-002
1993-92	6-Cyl Eng, w/MT	614-003	614-004
1991-90	4-Cyl Eng, 2.2L	614-001	614-002
1991-90	4-Cyl Eng, 2.3L	614-003	614-004
1991-90	6-Cyl Eng, w/Soft & Firm Ride Suspension FE1, F41	614-003	614-004
1991-90	6-Cyl Eng, w/Sport & Heavy Duty Suspension FE3, FE7, AT	614-001	614-002
1991-90	6-Cyl Eng, w/Sport & Heavy Duty Suspension FE3, FE7, MT	614-003	614-004
1989-87	-	614-003	614-004
CAVALIER			
2002-97	-	614-001	614-002

Make/ Model/Years	Description	Dorman Uni-Fit Outer	Dorman Uni-Fit Inner
CHEVROLET (continued)			
BERETTA (continued)			
1996	AT, 4-Speed	614-003	614-004
1996	MT, 2.4L Eng	614-003	614-004
1995	AT, 3-Speed	614-001	614-002
1995	AT, 4-Speed	614-003	614-004
1995	MT	614-003	614-004
1994-85	AT	614-001	614-002
1994-85	MT, 4-Cyl Eng	614-001	614-002
1994-85	MT, 6-Cyl Eng	614-003	614-004
1984	Hard Plastic Joint Seals	614-001	614-002
1984	Soft Rubber Joint Seals	614-001	614-004
1983-82	-	614-001	614-004
CELEBRITY			
1990-89	4-Cyl Eng	614-001	614-002
1990-89	6-Cyl Eng	614-003	614-004
1988	4-Cyl Eng, Exc. Heavy Duty Brakes	614-001	614-002
1988	4-Cyl Eng, Heavy Duty Brakes	614-003	614-004
1988	6-Cyl Eng	614-003	614-004
1987-85	Exc. Heavy Duty Brakes	614-001	614-002
1987-85	Heavy Duty Brakes	614-003	614-004
1984-83	Exc. Heavy Duty Brakes	614-001	614-004
1984-83	Heavy Duty Brakes	614-003	614-004
1982	-	614-001	614-004
CITATION			
1985	-	614-001	614-002
1984	Hard Plastic Joint Seals	614-001	614-002
1984	Soft Rubber Joint Seals	614-001	614-004
1983-80	-	614-001	614-004
CORSICA			
1996-94	4-Cyl Eng	614-001	614-002
1996-94	6-Cyl Eng	614-003	614-004
1993-92	4-Cyl Eng	614-001	614-002
1993-92	6-Cyl Eng, w/AT	614-001	614-002
1993-92	6-Cyl Eng, w/MT	614-003	614-004
1991-90	4-Cyl Eng	614-001	614-002
1991-90	6-Cyl Eng, w/Soft & Firm Ride Suspension FE1, F41	614-003	614-004
1991-90	6-Cyl Eng, w/Sport & Heavy Duty Suspension FE3, FE7, AT	614-001	614-002
1991-90	6-Cyl Eng, w/Sport & Heavy Duty Suspension FE3, FE7, MT	614-003	614-004
1989-87	-	614-003	614-004
IMPALA			
2006-00	-	614-003	614-004
LUMINA			
2001-94	-	614-003	614-004
1993-92	AT, 3-Speed	614-001	614-002
1993-92	AT, 4-Speed	614-003	614-004
1993-92	MT	614-003	614-004
1991-90	4-Cyl Eng	614-001	614-002
1991-90	6-Cyl Eng	614-003	614-004
LUMINA APV			
1996-90	-	614-003	614-004
MALIBU			
2004-97	-	614-003	614-004
METRO			
2001-98	-	614-001	614-002
MONTE CARLO			
2006-95	-	614-003	614-004
NOVA			
1988-85	-	614-001	614-002
PRIZM			
2002-98	-	614-001	614-002
SPECTRUM			
1988-85	-	614-001	614-002
SPRINT			
1988-85	-	614-001	614-002
TRACKER			
2003-98	4WD	614-001	614-002
VENTURE			
2005-97	-	614-003	614-004
CHEVROLET/GMC TRUCK			
ASTRO, SAFARI			
2005-90	-	614-003	614-004
AVALANCHE			
2006-02	4WD, 1/2 Ton	614-003	614-004
BLAZER, TAHOE, JIMMY, YUKON			
2006-92	-	614-003	614-004
DENALI			
2006-02	-	614-003	614-004
ENVOY, TRAILBLAZER			
2006-02	4WD	614-003	614-004

CV Joint Boot Kit Applications

Make/ Model/Years	Description	Dorman Uni-Fit Outer	Dorman Uni-Fit Inner
CHEVROLET/GMC TRUCK (continued)			
K1500 PICKUP			
2000-88	-	614-003	614-004
K2500, K3500 PICKUP			
2000-98	-	614-003	614-004
1997-88	-	614-003	614-004
LUV PICKUP			
1982-79	-	614-001	614-002
MOTORHOME			
1979-73	-	614-003	614-004
S SERIES BLAZER, ENVOY, JIMMY, TYPHOON			
1996-83	4WD	614-003	614-004
S SERIES BLAZER, JIMMY, TYPHOON			
2005-97	4WD	614-003	614-004
S SERIES PICKUP, SONOMA, SYCLONE			
2004-97	4WD	614-003	614-004
1996-83	4WD	614-003	614-004
SILVERADO, SIERRA			
2006-99	4WD, 1/2 Ton	614-003	614-004
SUBURBAN			
2006-92	4WD, 1/2 Ton	614-003	614-004
YUKON XL			
2006-01	4WD, 1/2 Ton	614-003	614-004
CHRYSLER			
300M			
2002	Exc. Special Series	614-001	614-002
2001-99	-	614-001	614-002
CIRRUS			
2000-95	-	614-001	614-002
CONCORDE			
2002-93	-	614-001	614-002
CONQUEST			
1989-87	-	614-001	614-002
E CLASS			
1984-83	-	614-001	614-002
EXECUTIVE SEDAN			
1984-83	-	614-001	614-002
IMPERIAL			
1993-91	-	614-003	614-002
1990	Axle-GKN	614-003	614-002
1990	Axle-Saginaw	614-001	614-002
LASER			
1986-84	-	614-001	614-002
LEBARON			
1995-94	-	614-003	614-002
1993-91	AT, w/Turbo	614-003	614-002
1993-91	AT, wo/Turbo	614-001	614-002
1993-91	MT, Axle-Saginaw	614-003	614-002
1990	-	614-001	614-002
1989-88	w/Turbo	614-001	614-002
1989-88	wo/Turbo	614-003	614-002
1987-82	-	614-001	614-002
LEBARON GTS			
1989-85	-	614-001	614-002
LHS			
2001-94	-	614-003	614-002
NEW YORKER			
1997-91	-	614-003	614-002
1990-83	-	614-001	614-002
PT CRUISER			
2005-00	-	614-001	614-002
SEBRING			
2003-95	-	614-003	614-002
TC MASERATI			
1991-89	-	614-001	614-002
TOWN & COUNTRY			
1988	w/Turbo	614-001	614-002
1988	wo/Turbo	614-003	614-002
1987-82	-	614-001	614-002
TOWN & COUNTRY VAN			
2003-00	-	614-003	614-002
1999-91	Front	614-003	614-002
1999-91	Rear	614-001	614-001
1990	-	614-001	614-002
VOYAGER			
2003-00	-	614-003	614-002
DAEWOO			
LANOS			
2002-99	-	614-001	614-002
LEGANZA			
2002-99	-	614-001	614-002
NUBIRA			
2002-99	-	614-001	614-002

Make/ Model/Years	Description	Dorman Uni-Fit Outer	Dorman Uni-Fit Inner
DAIHATSU			
CHARADE			
1992-88	-	614-001	614-002
ROCKY			
1992-90	-	614-001	614-002
DODGE			
400			
1983-82	-	614-001	614-002
600			
1988-83	-	614-001	614-002
ARIES			
1989-81	-	614-001	614-002
AVENGER			
2000-95	-	614-003	614-002
CARAVAN, GRAND CARAVAN, MINI RAM VAN			
2003-00	-	614-003	614-002
1999-91	Front	614-003	614-002
1999-91	Rear	614-001	614-001
1990-84	-	614-001	614-002
CHARGER			
1987-83	-	614-001	614-002
COLT			
1992-79	-	614-001	614-002
COLT VISTA			
1990-84	-	614-001	614-002
CONQUEST			
1986-83	-	614-001	614-002
DAYTONA			
1993	w/Turbo	614-003	614-002
1993	wo/Turbo, AT	614-001	614-002
1993	wo/Turbo, MT	614-003	614-002
1992	2.2L Eng	614-003	614-002
1992	2.5L Eng, w/Turbo	614-003	614-002
1992	2.5L Eng, wo/Turbo, AT	614-001	614-002
1992	2.5L Eng, wo/Turbo, MT	614-003	614-002
1992	3.0L Eng	614-003	614-002
1991	Axle-Saginaw, w/AT, 4-Cyl Eng, w/Turbo	614-003	614-002
1991	Axle-Saginaw, w/AT, 4-Cyl Eng, wo/Turbo	614-001	614-002
1991	Axle-Saginaw, w/AT, 6-Cyl Eng	614-003	614-002
1991	Axle-Saginaw, w/MT & w/ABS, 4-Cyl Eng, w/Turbo	614-003	614-002
1991	Axle-Saginaw, w/MT & wo/ABS, Left	614-003	614-002
1990-84	Axle-Saginaw	614-001	614-002
DYNASTY			
1993-91	4-Cyl Eng	614-001	614-002
1993-91	6-Cyl Eng	614-003	614-002
1990-88	-	614-001	614-002
INTREPID			
2002-98	-	614-003	614-002
1997-93	-	614-003	614-002
LANCER			
1989-85	-	614-001	614-002
MONACO			
1992-90	-	614-001	614-002
NEON			
2002-95	-	614-001	614-002
OMNI, O24			
1990-78	-	614-001	614-002
SHADOW			
1994	4-Cyl Eng, w/ABS	614-003	614-002
1994	4-Cyl Eng, wo/ABS, AT	614-001	614-002
1994	4-Cyl Eng, wo/ABS, MT	614-003	614-002
1994	6-Cyl Eng	614-003	614-002
1993	4-Cyl Eng, w/AT	614-001	614-002
1993	4-Cyl Eng, w/MT	614-003	614-002
1993	6-Cyl Eng	614-003	614-002
1992-91	AT, w/Turbo	614-003	614-002
1992-91	AT, wo/Turbo	614-001	614-002
1992-91	MT	614-003	614-002
1990-87	-	614-001	614-002
SPIRIT			
1995-94	2.5L Eng, w/AT, wo/Turbo	614-001	614-002
1993	2.5L Eng, ABS, wo/Turbo	614-001	614-002
1993	2.5L Eng, w/MT, Axle-Saginaw	614-003	614-002
1992-91	4-Cyl Eng, w/ABS	614-003	614-002
1990-89	-	614-001	614-002
STEALTH			
1996-91	Front	614-003	614-004
STRATUS			
2003-95	-	614-001	614-002

**Power Steering
Pulleys**
pg. 317-326

**Quick
Disconnect™**
pg. 327-396

**Radiator Fan
Assemblies**
pg. 397-430

**Rear Axle
Shaft Kits**
pg. 431-434

**Side View Mirror
Assemblies**
pg. 435-468

**Uni-Fit™ CV Boot System reduces
labor time and boosts profits!**

CV Joint Boot Kits

CV Joint Boot Kit Applications

Make/ Model/Years	Description	Dorman Uni-Fit Outer	Dorman Uni-Fit Inner
DODGE (continued)			
VIPER			
1997-92	-	614-001	614-002
DODGE TRUCK			
DAKOTA			
2003-87	4WD	614-003	614-004
DURANGO			
2003-98	-	614-003	614-002
RAIDER			
1989-87	4WD	614-001	614-002
RAM 1500 PICKUP			
2003-02	4WD	614-003	614-004
RAM 50			
1993-83	4WD	614-001	614-002
RAMPAGE			
1984-82	-	614-001	614-002
EAGLE			
2000 GTX			
1993-91	-	614-001	614-002
MEDALLION			
1989-88	-	614-001	614-002
PREMIER			
1992-88	-	614-001	614-002
SUMMIT			
1996-93	-	614-001	614-002
1992	Sedan, Axle-MMC	614-001	614-002
1991-89	-	614-001	614-002
TALON			
1998-90	-	614-001	614-002
VISION			
1997-93	-	614-003	614-002
FIAT			
124, 128			
1979-69	-	614-001	614-002
BERTONE X 1/9			
1985-74	-	614-001	614-002
STRADA			
1982-78	-	614-001	614-002
FORD			
ASPIRE			
1997-94	-	614-001	614-002
CONTOUR			
2000-95	-	614-001	614-002
ESCORT			
2002-81	-	614-001	614-002
EXP			
1985-81	-	614-001	614-002
FESTIVA			
1993-88	-	614-001	614-002
FIESTA			
1980-78	-	614-001	614-002
FOCUS			
2006-00	-	614-001	614-002
PROBE			
1997-90	-	614-001	614-002
1989-88	w/Turbo	614-003	614-004
1989-88	wo/Turbo	614-001	614-002
TAURUS			
2006-86	-	614-001	614-002
TEMPO			
1994-84	-	614-001	614-002
THUNDERBIRD			
1997-89	-	614-001	614-001
ZX2			
2003-98	AT	614-001	614-002
FORD TRUCK			
AEROSTAR			
1997-86	-	614-001	614-002
ESCAPE			
2006-01	-	614-001	614-002
EXPEDITION			
2006-97	-	614-003	614-004
EXPLORER			
2006-02	Front	614-003	614-004
2006-02	Rear, Exc. Sport or Sport Trac	614-003	614-003
2001-95	-	614-003	614-004
F150 PICKUP			
2006-97	4WD	614-003	614-004
F250 PICKUP			
1999-97	4WD	614-003	614-004
RANGER			
2006-98	4WD	614-003	614-004

Make/ Model/Years	Description	Dorman Uni-Fit Outer	Dorman Uni-Fit Inner
FORD TRUCK (continued)			
WINDSTAR			
2003-95	-	614-001	614-001
GEO			
METRO			
1997-88	-	614-001	614-002
PRIZM			
1997-89	-	614-001	614-002
SPECTRUM			
1989	-	614-001	614-002
STORM			
1993-90	-	614-001	614-002
TRACKER			
1997-88	-	614-001	614-002
GMC TRUCK (SEE CHEVROLET/GMC TRUCK)			
HONDA			
ACCORD			
2005-03	4-Cyl Eng, 2-Door, MT	614-003	—
2005-03	4-Cyl Eng, 4-Door, MT, USA Built	614-003	—
2005-03	6-Cyl Eng, RH, Exc. Hybrid	614-003	—
2002-86	-	614-003	614-002
1985-76	-	614-001	614-002
CIVIC			
2005-92	-	614-001	614-002
1991-88	Front	614-001	614-002
1991-88	Rear	614-001	614-001
1987-73	-	614-001	614-002
CIVIC DEL SOL			
1997-93	-	614-001	614-002
CRV			
2002-98	-	614-001	614-002
CRX			
1991-84	-	614-001	614-002
ELEMENT			
2005-04	-	614-003	—
ODYSSEY			
2001-95	-	614-001	614-002
PASSPORT			
2002-94	-	614-001	614-002
PRELUDE			
2001-90	-	614-003	614-002
1989-79	-	614-001	614-002
WAGOVAN			
1989-82	-	614-001	614-002
HYUNDAI			
ACCENT			
2005-95	-	614-001	614-002
ELANTRA			
2005-92	-	614-001	614-002
EXCEL			
1994-86	-	614-001	614-002
SANTA FE			
2004-01	-	614-001	614-002
SCOUPE			
1995-91	-	614-001	614-002
SONATA			
2005-95	-	614-001	614-002
1994-90	4-Cyl Eng	614-001	614-002
1994-90	6-Cyl Eng	614-003	614-004
1989	-	614-001	614-002
TIBURON			
2001-97	-	614-001	614-002
INFINITI			
G20			
2002-99	-	614-001	614-002
1996-90	-	614-001	614-002
I30			
2001-96	-	614-003	614-004
I35			
2004-02	-	614-003	614-004
J30			
1997-93	-	614-003	614-003
M30			
1993-90	-	614-003	614-003
Q45			
1997-90	-	614-003	614-003
QX4			
2003-97	-	614-003	614-003
ISUZU			
AMIGO			
2000-89	4WD	614-001	614-002
AXIOM			
2002	-	614-001	614-002

CV Joint Boot Kit Applications

Make/ Model/Years	Description	Dorman Uni-Fit Outer	Dorman Uni-Fit Inner
ISUZU (continued)			
HOMBRE			
2000-96	4WD	614-001	614-002
I-MARK			
1989-85	-	614-001	614-002
OASIS			
1998-96	-	614-001	614-002
PICKUP			
1997-81	-	614-001	614-002
RODEO			
2004-91	4WD	614-001	614-002
TROOPER			
2001-84	4WD	614-001	614-002
VEHICROSS			
2001-99	4WD	614-001	614-002
JEEP			
CHEROKEE			
2001-84	-	614-001	—
COMANCHE			
1992-86	-	614-001	—
GRAND CHEROKEE			
2001-93	-	614-001	—
WAGONEER			
1990-84	-	614-001	—
KIA			
SEDONA			
2004-02	-	614-001	614-002
SEPHIA			
2001-94	-	614-001	614-002
SPECTRA			
2004-00	-	614-001	614-002
SPORTAGE			
2002-95	-	614-001	614-002
LEXUS			
ES250			
1991-90	-	614-003	614-004
ES300			
2003-92	-	614-001	614-002
LX450			
1999-96	-	614-001	614-002
RX300			
2003-99	Front	614-003	614-004
2003-99	Rear	614-003	614-003
LINCOLN			
CONTINENTAL			
2002-88	-	614-001	614-001
NAVIGATOR			
2006-97	-	614-003	614-004
MAZDA			
323			
1994-86	-	614-001	614-002
626			
2002-83	-	614-001	614-002
929			
1995-88	-	614-001	614-002
B SERIES PICKUP			
2002-98	-	614-003	614-004
1993-86	-	614-001	614-002
GLC			
1985-81	-	614-001	614-002
MIATA			
2003-90	-	614-001	614-002
MILLENNIA			
2002-95	-	614-001	614-002
MPV			
2003-89	-	614-001	614-002
MX-3			
1995-92	-	614-001	614-002
MX-6			
1997-93	-	614-001	614-002
1992-88	w/Turbo	614-003	614-004
1992-88	wo/Turbo	614-001	614-002
PROTEGE			
2002-90	FWD	614-001	614-002
RX-7			
1996-86	-	614-001	614-002
MERCEDES BENZ			
190D			
1982-73	-	614-001	614-001
220 SERIES			
1973	-	614-001	614-001
230			
1978-73	-	614-001	614-001

Make/ Model/Years	Description	Dorman Uni-Fit Outer	Dorman Uni-Fit Inner
MERCEDES BENZ (continued)			
240D			
1982-74	-	614-001	614-001
280 SERIES			
1981-73	-	614-001	614-001
300 SERIES			
1996-83	-	614-003	614-001
1982-73	-	614-001	614-001
380 SERIES			
1982-81	-	614-001	614-001
450 SERIES			
1980-73	-	614-001	614-001
560 SERIES			
1991-86	-	614-003	614-001
ML320			
2001-98	Front	614-003	614-004
2001-98	Rear	614-003	614-003
ML430			
2001-99	Front	614-003	614-004
2001-99	Rear	614-003	614-003
MERCURY			
COUGAR			
2002-89	-	614-001	614-001
LN7			
1983-81	-	614-001	614-002
LYNX			
1987-81	-	614-001	614-002
MOUNTAINEER			
2006-02	Front	614-003	614-004
2006-02	Rear	614-003	614-003
2001-97	-	614-003	614-004
MYSTIQUE			
2000-95	-	614-001	614-002
SABLE			
2005-86	-	614-001	614-002
TOPAZ			
1994-84	-	614-001	614-002
TRACER			
1999-97	-	614-001	614-002
1996-91	-	614-001	614-002
VILLAGER			
2002-93	-	614-001	614-002
MERKUR			
SCORPIO			
1989-88	-	614-001	614-002
XR4TI			
1989-85	-	614-001	614-002
MINI			
3000GT			
1999-91	Front	614-003	614-004
CORDIA			
1988-83	-	614-001	614-002
DIAMANTE			
2004-92	-	614-001	614-002
ECLIPSE			
2005-90	-	614-001	614-002
ECLIPSE SPYDER			
2005-00	-	614-001	614-002
EXPO, EXPO LRV			
1995-92	-	614-001	614-002
GALANT			
2003-89	-	614-001	614-002
LANCER			
2002	-	614-001	614-002
MIGHTY MAX PICKUP			
1995-83	-	614-003	614-002
MIRAGE			
2002-85	-	614-001	614-002
MONTERO			
2005-83	-	614-001	614-002
MONTERO SPORT			
2004-97	-	614-001	614-002
PRECIS			
1993-86	-	614-001	614-002
SIGMA			
1990-88	-	614-003	614-002
STARION			
1989-83	-	614-001	614-002
TREDIA			
1988-83	-	614-001	614-002
NISSAN			
200SX			
1998-95	-	614-001	614-002

Window
Lift Motors
pg. 535-554

Window
Regulators
pg. 555-566

Wiper
Motors
pg. 567-572

Wiper Transmission
Linkages
pg. 573-576

Uni-Fit™ CV Boot System reduces
labor time and boosts profits!

CV Joint Boot Kits

CV Joint Boot Kits

CV Joint Boot Kit Applications

Make/ Model/Years	Description	Dorman Uni-Fit Outer	Dorman Uni-Fit Inner
NISSAN (continued)			
200SX (continued)			
1988-84	Rear	614-001	614-002
240SX			
1998-92	-	614-001	614-002
1991-89	Rear	614-001	614-002
240Z			
1973-71	Rear	614-001	614-002
260Z			
1975-74	Rear	614-001	614-002
280Z			
1978-75	Rear	614-001	614-002
280ZX			
1983-79	Rear	614-001	614-002
300ZX			
1997-84	Rear	614-001	614-002
310			
1982-79	-	614-001	614-002
720 PICKUP			
1986-80	-	614-001	—
ALTIMA			
2001-93	-	614-001	614-002
AXXESS			
1990-89	-	614-001	614-002
F10			
1978-76	-	614-001	614-002
FRONTIER			
2003-98	4WD	614-003	614-004
MAXIMA			
2001-85	-	614-003	614-002
1984	Rear, Sedan	614-001	614-002
NX COUPE			
1995-91	-	614-001	614-002
PATHFINDER			
2003-87	-	614-003	614-004
PICKUP, D21 PICKUP			
1997-96	-	614-003	614-004
1995-94	4-Cyl Eng	614-003	614-004
1993	To 11/92	614-003	614-004
1992-86	-	614-003	614-004
1985-80	4WD	614-003	614-004
PULSAR			
1990-83	-	614-001	614-002
QUEST			
2002-93	-	614-001	614-002
SENTRA			
2001-95	-	614-001	614-002
1994-91	wo/ABS	614-001	614-002
1990-88	Front, 2WD, Sedan & Wagon	614-001	614-002
1990-88	Front, Coupe	614-001	614-002
1990-88	Rear	614-001	614-002
1987	2WD, Sedan & Wagon	614-001	614-002
1987	Coupe	614-001	614-002
1986-82	-	614-001	614-002
STANZA			
1992-87	-	614-003	614-004
1986-82	-	614-001	614-002
XTERRA			
2003-00	-	614-003	614-004
OLDSMOBILE			
98, 98 REGENCY			
1996-85	-	614-003	614-004
ACHIEVA			
1998-96	-	614-003	614-004
1995-94	AT, 3-Speed	614-001	614-002
1995-94	AT, 4-Speed	614-003	614-004
1995-94	MT	614-003	614-004
1993-92	w/16" Wheels	614-003	614-004
1993-92	wo/16" Wheels, AT	614-001	614-002
1993-92	wo/16" Wheels, MT	614-003	614-004
ALERO			
2004-99	-	614-001	614-002
AURORA			
2003-95	-	614-003	614-004
BRAVADA			
2004-91	-	614-003	614-004
CALAIS, CUTLASS CALAIS			
1991	w/ABS	614-003	614-004
1991	wo/ABS, AT	614-001	614-002
1991	wo/ABS, MT	614-003	614-004
1990-85	AT	614-001	614-002
1990-85	MT	614-003	614-004

Make/ Model/Years	Description	Dorman Uni-Fit Outer	Dorman Uni-Fit Inner
OLDSMOBILE (continued)			
CIERA, CUTLASS CIERA			
1996-94	-	614-003	614-004
1993-89	4-Cyl Eng	614-001	614-002
1993-89	6-Cyl Eng	614-003	614-004
1988	4-Cyl Eng, Exc. Heavy Duty Brakes	614-001	614-002
1988	4-Cyl Eng, Heavy Duty Brakes	614-003	614-004
1988	6-Cyl Eng	614-003	614-004
1987-85	Exc. Heavy Duty Brakes	614-001	614-002
1987-85	Heavy Duty Brakes	614-003	614-004
1984-83	Exc. Heavy Duty Brakes	614-001	614-004
1984-83	Heavy Duty Brakes	614-003	614-004
1982	-	614-001	614-004
CUTLASS, CUTLASS SUPREME			
1999-97	-	614-001	614-002
1996-95	-	614-003	614-004
1994	-	614-003	614-004
1993	AT, 3-Speed	614-001	614-002
1993	AT, 4-Speed	614-003	614-004
1992	AT, 3-Speed	614-001	614-002
1992	AT, 4-Speed	614-003	614-004
1992	MT	614-003	614-004
1991-88	-	614-003	614-004
DELTA 88, 88 ROYALE, LSS			
1999-86	-	614-003	614-004
FIRENZA			
1988	-	614-001	614-002
1987	AT	614-001	614-002
1987	MT, Exc. Getrag Trans	614-001	614-002
1987	MT, Getrag Trans	614-003	614-004
1986-85	AT	614-001	614-002
1986-85	MT, w/4-Cyl Eng	614-001	614-002
1986-85	MT, w/6-Cyl Eng	614-003	614-004
1984	Hard Plastic Joint Seals	614-001	614-002
1984	Soft Rubber Joint Seals	614-001	614-004
1983-82	-	614-001	614-004
INTRIGUE			
2002-98	-	614-003	614-004
OMEGA			
1984	Hard Plastic Joint Seals	614-001	614-002
1984	Soft Rubber Joint Seals	614-001	614-004
1983-80	-	614-001	614-004
SILHOUETTE			
2004-97	-	614-003	614-004
1994-90	-	614-003	614-004
TORONADO, TROFEO			
1992-67	-	614-003	614-004
PLYMOUTH			
ACCLAIM			
1995-94	2.5L Eng, w/AT, wo/Turbo	614-001	614-002
1993	2.5L Eng, w/AT, wo/Turbo	614-001	614-002
1993	2.5L Eng, w/MT, Axle-Saginaw	614-003	614-002
1992-91	2.2L Eng, w/ABS	614-003	614-002
1992-91	2.5L Eng, w/ABS, MT	614-003	614-002
1990-89	-	614-001	614-002
BREEZE			
2000-94	-	614-001	614-002
CARAVELLE			
1988-85	-	614-001	614-002
CHAMP			
1982-79	-	614-001	614-002
COLT			
1992-90	Axle-MMC	614-001	614-002
1989	w/Turbo	614-001	614-002
1989	wo/Turbo, Axle-MMC	614-001	614-002
1988-84	-	614-001	614-002
COLT VISTA			
1994-84	-	614-001	614-002
CONQUEST			
1986-83	-	614-001	614-002
HORIZON, TC3, TURSIMO			
1990-78	-	614-001	614-002
LASER			
1994-90	-	614-001	614-002
NEON			
2001-95	-	614-001	614-002
RELIANT			
1989-81	-	614-001	614-002
SCAMP			
1983	-	614-001	614-002
SUNDANCE			
1994	4-Cyl Eng, w/ABS	614-003	614-002
1994	4-Cyl Eng, wo/ABS, AT	614-001	614-002

CV Joint Boot Kit Applications

Make/ Model/Years	Description	Dorman Uni-Fit Outer	Dorman Uni-Fit Inner
PLYMOUTH (continued)			
SUNDANCE (continued)			
1994	4-Cyl Eng, wo/ABS, MT	614-003	614-002
1994	6-Cyl Eng	614-003	614-002
1993	4-Cyl Eng, w/AT	614-001	614-002
1993	4-Cyl Eng, w/MT	614-003	614-002
1993	6-Cyl Eng	614-003	614-002
1992-91	AT, w/Turbo	614-003	614-002
1992-91	AT, wo/Turbo	614-001	614-002
1992-91	MT	614-003	614-002
1990-87	-	614-001	614-002
VOYAGER, GRAND VOYAGER			
2000	-	614-003	614-002
1999-91	Front	614-003	614-002
1999-91	Rear	614-001	614-001
1990-84	-	614-001	614-002
PONTIAC			
6000			
1991-89	4-Cyl Eng	614-001	614-002
1991-89	6-Cyl Eng	614-003	614-004
1988	4-Cyl Eng, Exc. Heavy Duty Brakes	614-001	614-002
1988	4-Cyl Eng, Heavy Duty Brakes	614-003	614-004
1988	6-Cyl Eng	614-003	614-004
1987-83	Exc. Heavy Duty Brakes	614-001	614-002
1987-83	Heavy Duty Brakes	614-003	614-004
1982	-	614-001	614-004
AZTEK			
2005-01	-	614-003	614-004
BONNEVILLE			
2005-87	-	614-003	614-004
FIERO			
1988-85	AT	614-001	614-002
1988-85	MT	614-003	614-004
1984	Hard Plastic Joint Seals, AT	614-001	614-002
1984	Hard Plastic Joint Seals, MT	614-003	614-004
1984	Soft Rubber Joint Seals, AT	614-001	614-004
1984	Soft Rubber Joint Seals, MT	614-003	614-004
GRAND AM			
2005-97	-	614-003	614-004
1994	AT, 3-Speed	614-001	614-002
1994	AT, 4-Speed	614-003	614-004
1994	MT	614-003	614-004
1993-92	w/16" Wheels	614-003	614-004
1993-92	wo/16" Wheels, AT	614-001	614-002
1993-92	wo/16" Wheels, MT	614-003	614-004
1991	w/ABS	614-003	614-004
1991	wo/ABS, AT	614-001	614-002
1991	wo/ABS, MT	614-003	614-004
1990	AT	614-001	614-002
1990	MT	614-003	614-004
1989	AT, w/Aluminum Wheels	614-001	614-002
1989	AT, wo/Aluminum Wheels	614-003	614-004
1989	MT	614-003	614-004
1988-85	AT	614-001	614-002
1988-85	MT	614-003	614-004
GRAND PRIX			
2006-94	-	614-003	614-004
1993-92	AT, 3-Speed	614-001	614-002
1993-92	AT, 4-Speed	614-003	614-004
1993-92	MT	614-003	614-004
1991-88	-	614-003	614-004
J2000			
1985-84	AT	614-001	614-002
1985-84	MT, w/Turbo	614-003	614-004
1985-84	MT, wo/Turbo	614-001	614-002
1983-82	-	614-001	614-004
LEMANS			
1993-88	-	614-001	614-002
MONTANA			
2005-99	-	614-003	614-004
PHOENIX			
1984	Hard Plastic Joint Seals	614-001	614-002
1984	Soft Rubber Joint Seals	614-001	614-004
1983-80	-	614-001	614-004
SUNBIRD			
1994-91	4-Cyl Eng	614-001	614-002
1994-91	6-Cyl Eng, w/AT	614-001	614-002
1994-91	6-Cyl Eng, w/MT	614-003	614-004
1990-85	AT	614-001	614-002
1990-85	MT, w/Turbo	614-003	614-004
1990-85	MT, wo/Turbo	614-001	614-002
SUNFIRE			
2002-97	-	614-001	614-002

Make/ Model/Years	Description	Dorman Uni-Fit Outer	Dorman Uni-Fit Inner
PONTIAC (continued)			
SUNFIRE (continued)			
1996	AT, 4-Speed	614-003	614-004
1996	MT, 2.4L Eng	614-003	614-004
1995	AT, 3-Speed	614-001	614-002
1995	AT, 4-Speed	614-003	614-004
1995	MT	614-003	614-004
TRANS SPORT			
1994-90	-	614-003	614-004
PORSCHE			
924			
1988-79	-	614-001	614-002
944			
1991-82	-	614-001	614-002
RENAULT			
181			
1986-80	-	614-001	614-002
ALLIANCE			
1987-83	-	614-001	614-002
ENCORE			
1986-84	-	614-001	614-002
FUEGO			
1985-82	-	614-001	614-002
LECAR, R5			
1984-76	-	614-001	614-002
SPORTWAGON			
1987-85	-	614-001	614-002
SAAB			
900			
1993-78	-	614-001	614-002
9000			
1995-90	w/Turbo	614-003	614-004
1995-90	wo/Turbo	614-001	614-002
1989-85	-	614-001	614-002
99			
1984-75	-	614-001	614-002
SATURN			
I SERIES			
2005-00	-	614-001	614-002
SC, SL, SW SERIES			
2002-91	-	614-001	614-002
STERLING			
825, 827 SERIES			
1990-87	-	614-003	614-002
SUBARU			
BRAT			
1987-78	Front	614-001	614-002
DL			
1989-75	-	614-001	614-002
FE			
1979	-	614-001	614-002
FORESTER			
2001-98	-	614-001	614-002
GF			
1979-75	-	614-001	614-002
GL			
1989-75	-	614-001	614-002
GL-10			
1989-86	-	614-001	614-002
GLF			
1982-80	-	614-001	614-002
IMPREZA			
2001-97	-	614-001	614-002
1996-93	1.8L Eng, Front	614-001	614-002
JUSTY			
1994-87	-	614-001	614-002
LEGACY			
2004-96	Front	614-001	614-002
1995-90	Front	614-001	614-001
LEGACY OUTBACK			
2004-96	Front	614-001	614-002
LOYALE			
1994-90	-	614-001	614-002
RX			
1989-86	-	614-001	614-002
STANDARD			
1987-76	-	614-001	614-002
SVX			
1997-92	-	614-001	614-002
XT			
1991-85	-	614-001	614-002
XT6			
1991-88	4WD	614-001	614-002

**Clock
Springs**
pg. 21-24

**Control
Arms**
pg. 25-54

**CV Joint Boots
& Accessories**
pg. 55-66

**Door Lock
Actuators**
pg. 67-72

**Exhaust
Manifold Kits**
pg. 73-134

**Uni-Fit™ CV Boot System reduces
labor time and boosts profits!**

CV Joint Boot Kits

CV Joint Boot Kit Applications

Make/ Model/Years	Description	Dorman Uni-Fit Outer	Dorman Uni-Fit Inner
SUZUKI			
ESTEEM			
2002-95	-	614-001	614-002
GRAND VITARA			
2004-99	-	614-001	614-002
SAMURAI			
1995-86	-	614-001	614-002
SIDEKICK			
1998-89	-	614-001	614-002
SWIFT			
2001-89	-	614-001	614-002
VITARA			
2004-99	-	614-001	614-002
X-90			
1998-96	-	614-001	614-002
TOYOTA			
4-RUNNER			
2002-96	4WD	614-003	614-004
1995-86	-	614-003	614-004
AVALON			
2004-95	-	614-001	614-002
CAMRY			
2002-97	-	614-003	614-004
1996-92	4-Cyl Eng, Axle-GKN	614-003	614-004
1996-92	4-Cyl Eng, Axle-Toyota	614-001	614-002
1991-89	4-Cyl Eng, 2WD	614-001	614-002
1991-89	4-Cyl Eng, 4WD, w/AT	614-001	614-002
1991-89	6-Cyl Eng	614-003	614-004
1988	4-Cyl Eng, 2WD	614-001	614-002
1988	4-Cyl Eng, 4WD, w/ABS	614-003	614-004
1988	6-Cyl Eng	614-003	614-004
1987-83	-	614-001	614-002
CELICA			
2002-98	-	614-001	614-002
1997-94	1.8L Eng	614-001	614-002
1997-94	2.2L Eng, w/AT	614-001	614-002
1993-90	Front, All Trac	614-003	614-004
1993-90	Front, GT, GTS & ST	614-001	614-002
1993-90	Rear	614-001	614-001
1989-88	Front, 2WD	614-001	614-002
1989-88	Front, 4WD	614-003	614-004
1989-88	Rear	614-001	614-001
1987-86	-	614-001	614-002
COROLLA			
2002-98	-	614-001	614-002
1997-93	Axle-Toyota	614-001	614-002
1992	2WD, Japan Built	614-001	614-002
1991	Coupe, Exc. GTS	614-001	614-002
1991	Sedan & Wagon, 2WD, Japan Built	614-001	614-002
1990-89	Coupe	614-001	614-002
1990-89	Sedan & Wagon, 2WD, Japan Built	614-001	614-002
1988	Coupe	614-001	614-002
1988	Sedan & Wagon, 2WD	614-001	614-002
1987	1.6L Eng	614-001	614-002
1986-84	-	614-001	614-002
COROLLA FX, FX16, FX16GTS			
1988-86	-	614-001	614-002
CRESSIDA			
1991-89	-	614-003	614-003
1988-85	-	614-001	614-001
ECHO			
2003-00	-	614-001	614-002
HIGHLANDER			
2003-01	4WD	614-003	614-004
MR2			
1995-85	Rear	614-001	614-002
PASEO			
1998-92	-	614-001	614-002
PICKUP			
1996-95	4WD	614-003	614-004
1994-86	-	614-003	614-004
PREVIA			
1997-91	-	614-003	614-004
RAV4			
2003-01	Front	614-003	614-004
2003-01	Rear	614-003	614-003
2000-96	Front, 4WD	614-003	614-004
2000-96	Rear	614-003	614-003

Make/ Model/Years	Description	Dorman Uni-Fit Outer	Dorman Uni-Fit Inner
TOYOTA (continued)			
SEQUOIA			
2003-01	4WD	614-003	614-004
SIENNA			
2002-97	FWD	614-001	614-002
SOLARA			
2003-99	-	614-003	614-004
SUPRA			
1999-98	-	614-001	614-001
1997	Rear, wo/Turbo	614-001	614-001
1996-79	-	614-001	614-001
T100 PICKUP			
1998-93	4WD	614-003	614-004
TACOMA			
2004-95	4WD	614-003	614-004
TERCEL			
1998-80	-	614-001	614-002
TUNDRA			
2003-00	4WD	614-003	614-004
VOLKSWAGEN			
BEETLE			
2003-98	-	614-001	614-002
CABRIO			
2002-95	-	614-001	614-002
CABRIOLET			
1993-85	-	614-001	614-002
CORRADO			
1994-90	-	614-001	614-002
DASHER			
1981-74	-	614-001	614-002
EUROVAN			
2003-99	-	614-001	614-002
1993	-	614-001	614-002
FOX			
1993-87	-	614-001	614-002
GOLF			
2005-85	-	614-001	614-002
JETTA			
2005-80	-	614-001	614-002
PASSAT			
2002-90	-	614-001	614-002
QUANTUM			
1988-86	Front	614-001	614-002
1988-86	Rear	614-001	614-002
1985-82	-	614-001	614-002
RABBIT			
1984-75	-	614-001	614-002
RABBIT PICKUP			
1984-80	-	614-001	614-002
SCIROCCO			
1988-75	-	614-001	614-002
VOLVO			
780			
1989-88	Coupe & Sedan	614-001	614-002
850			
1997-93	Non Turbo	614-001	614-002
C70			
2004-98	-	614-001	614-002
S40			
2004-00	-	614-003	614-004
S60			
2005-01	-	614-003	614-004
S70			
2000-98	-	614-001	614-002
S80			
2005-99	-	614-001	614-002
V40			
2004-00	-	614-003	614-004
V70			
2005-98	-	614-001	614-002
WINNEBAGO			
CENTAURI			
1985-83	-	614-001	614-002
LASHARO			
1992-83	-	614-001	614-002
YUGO			
GV SERIES			
1991-86	-	614-001	614-002