


88-405 R and R Mercedes star

Removal

1 Pull spring clip energetically down with water pump pliers and turn to the left by 90°.

2 Make sure that spring clip engages in grooves of rosette.

3 Pull Mercedes star out of radiator cowling in upward direction.

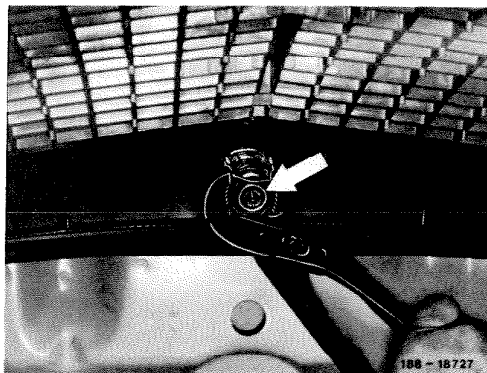

Installation

4 Insert Mercedes star into radiator cowling and turn spring clip with water pump pliers to the right by 90°.

