

# How to Change EFI Harness Boots



STEP 1: Remove snap ring from harness




STEP 2: Pull plastic wrap back, remove clip



STEP 3:  
Mark plug (black wire)



STEP 4: Insert removal tool into slot on plug (as seen in oval), apply slight upward pressure and release wires.

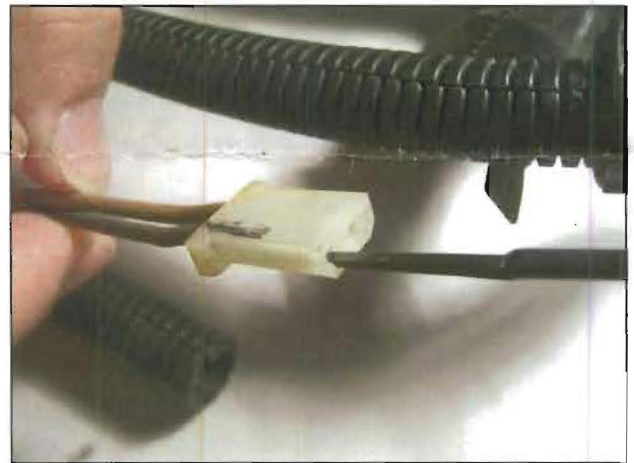


## NOTE:


NAPA Auto Parts markets a tool (napa 725168) specifically made for removing fuel injection plugs. OTC offers a similar tool, part #7737. Although not as efficient, a jeweler's screwdriver can be substituted.



NAPA fuel injection plug tool

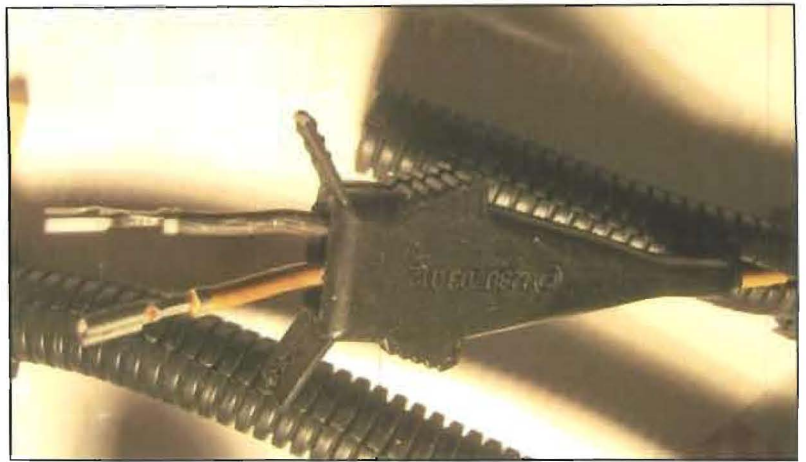

STEP 5: Apply dielectric grease to the wire insulation and slide on the new boot.

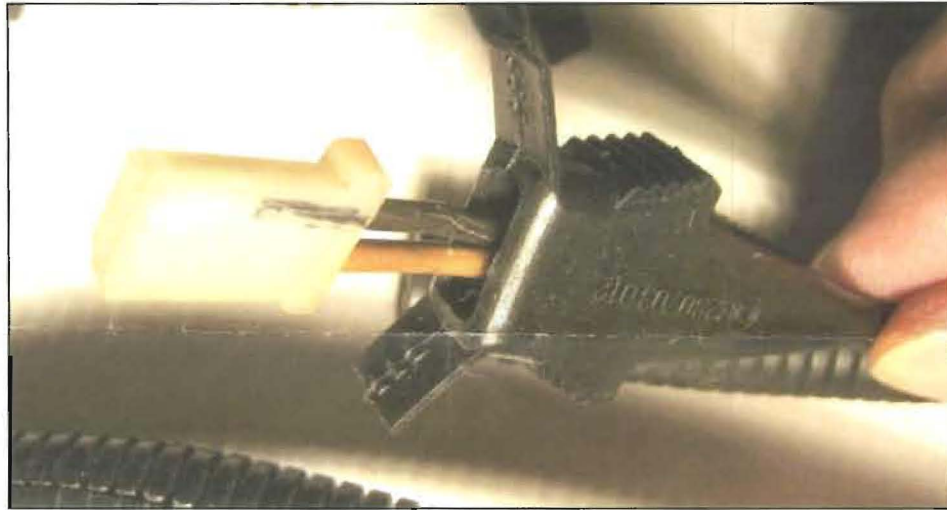

STEP 6: Insert wires into plug making sure of correct posi-



STEP 7: Slide boot over plug, reinstall plastic wrap, reinstall snap ring.