

Double roller blind

Revision: Attention! added

Model 124 T-sedan




86.2


The double roller blind serves to protect the passengers and to cover the luggage.

Scope

- 1 Find the fastening points for holder by means of a needle.

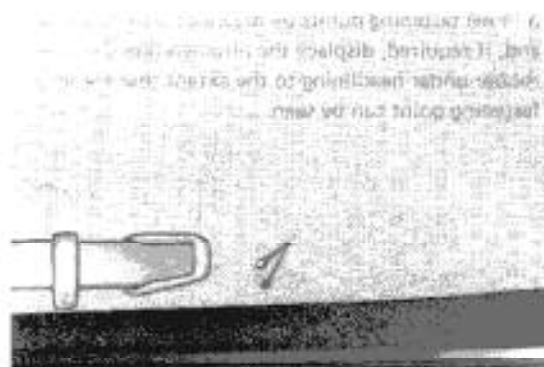

186-33006

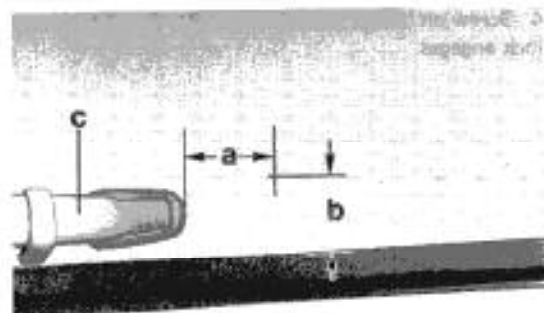

Fastening point front left,
mirror image at the right


- a approx. 55 mm
- b approx. 40 mm
- c Grip for rear compartment passengers

186-33005



Fastening point on roof frame rear left,
mirror image at the right


- a approx. 110 mm
- b approx. 70 mm (measured along
round surface)
- c Lining on roof frame rear

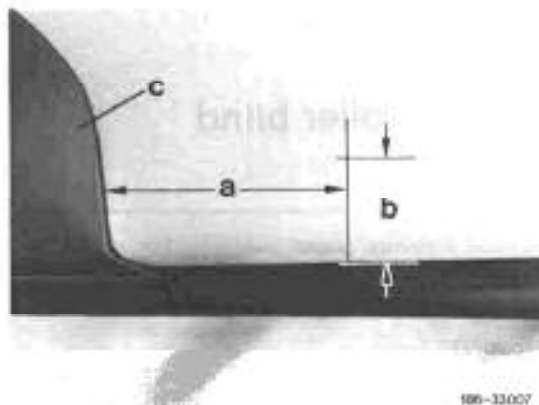


Attention!

Cut into headlining only after fastening points have
been found.

- 2 Cut a longitudinal slit approx. 15 mm long on
headlining.

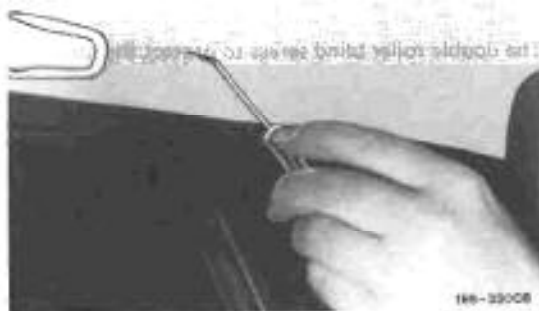

- 3 Feel fastening points by means of a screwdriver
and, if required, displace the bitumen board or foam
rubber under headlining to the extent that the entire
fastening point can be seen.

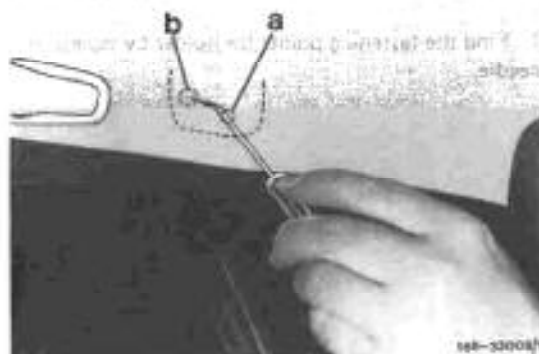


- a Fastening point
- b Hole for torsion lock

- 4 Screw on holder in such a manner that the torsion
lock engages.


Holder front left,
mirror image at the right

- 1 Holder
- 2 Screw M6 x 16
- 3 Snap ring B6

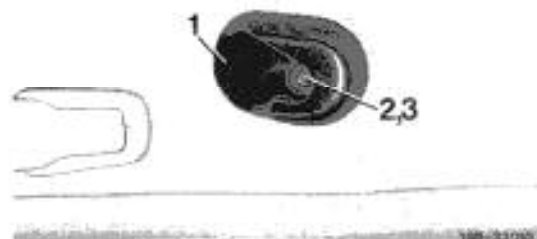


Holder rear left,
mirror image at the right

- 1 Holder
- 2 Screw M6 x 16
- 3 Snap ring 88

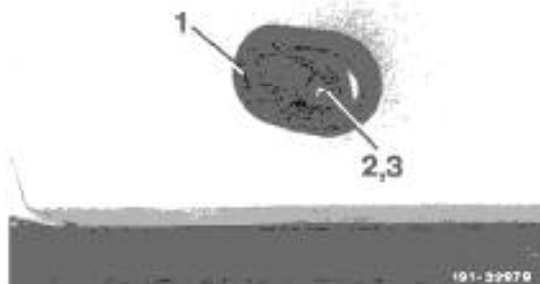


5 Remove lining of tailgate.

6 Finish pre-perforated cutouts (arrows) in lining at left and right.

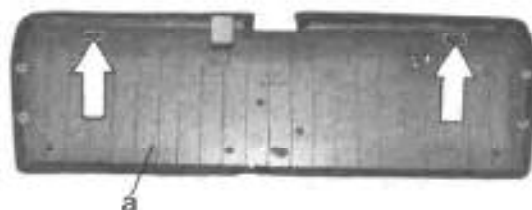

a Lining, tailgate

7 Screw flat cramps at available fastening points on tailgate left and right.

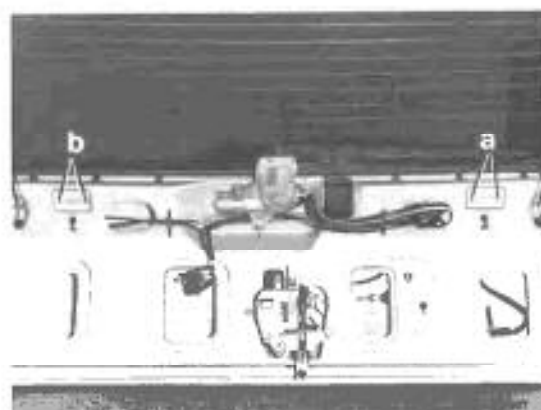

a Fastening points, left
b Fastening points, right

Flat cramp on tailgate, left,
mirror image at the right


- 5 Flat cramp
- 6 Screw B 3.5 x 9.5



8 Put lining back on tailgate.


9 Clip rosettes into cutouts of lining.

- 4 Rosette
5 Flat cramp

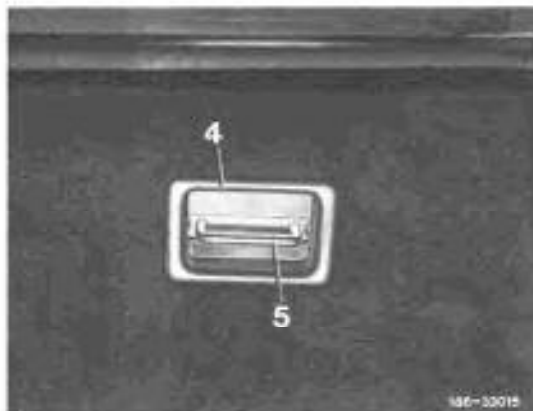


10 Feel cutouts for guide rails of double roller blind on back of lefthand rear backrest and cut out carpet.

- Layout, left
a Rear backrest, left

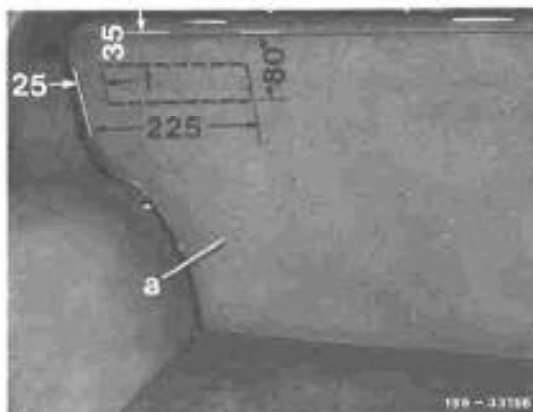

- Layout, right
a Rear backrest, left

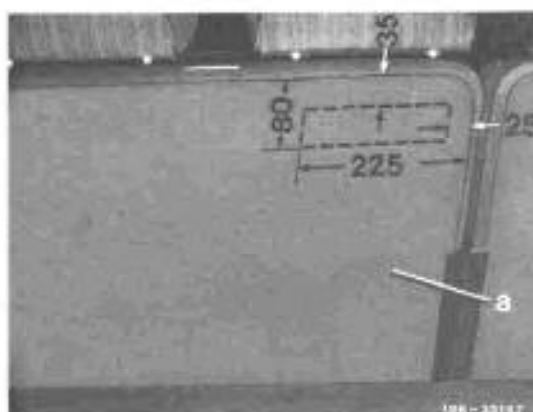


11 Remove screwed or clipped-in fillers out of cavities for fastening double roller blind.

- Layout, left
a Rear seat backrest, left
b Cavity for fastening double roller blind




12 Check whether threaded inserts (arrows) are installed in rear backrest.

Note: If there are no threaded inserts in backrest, install inserts according to item 13–17.

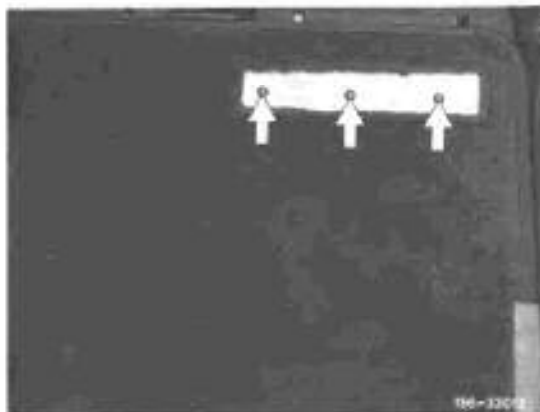


13 Remove rear backrest, left, also remove covering with foam member from rear backrest. For this purpose, carefully force off protective cap (arrows) which is clipped-in all-around, and unscrew guide located underneath.

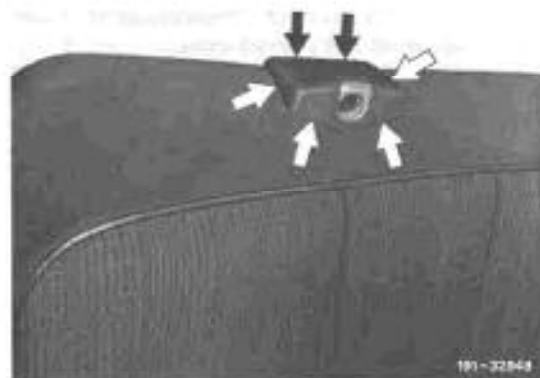

14 On vehicles with rear head restraints, refinish guides in range of holes, if required, so that the threaded bushing can be inserted.


Attention!

Make sure that the hole of the plastic backrest is not damaged.

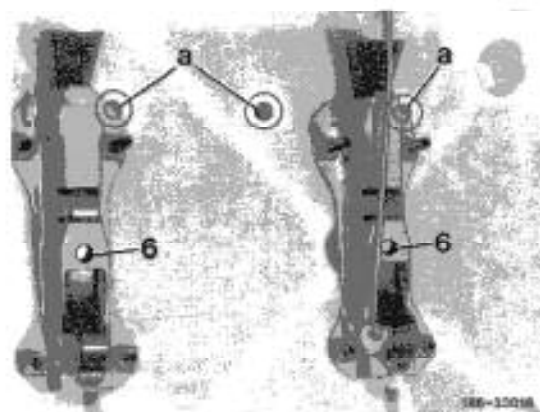

6 Guide, head restraint
a Holes, double roller blind fastening

15 Screw M6 x 30 screw with nut M6 for approx. 8 mm into threaded insert and counterlock nut M6 with threaded insert.

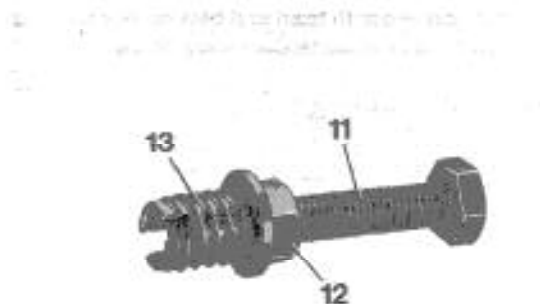


11 Screw M6 x 30
12 Nut M6
13 Threaded insert




16 Force screw M6 x 30 with threaded insert into available bore of rear seat backrest.

13 Threaded insert
a Bore, threaded insert

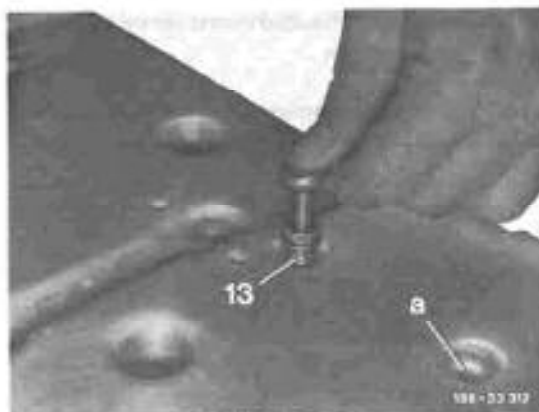


17 Align screw M6 x 30 with threaded insert accurately at right angles and screw completely down. Then loosen counternut and unscrew screw.

13 Threaded insert

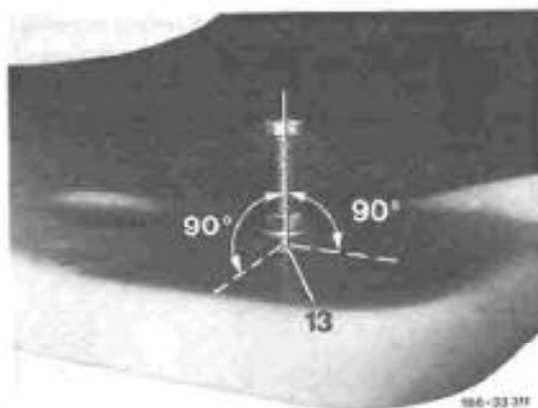


13 Threaded insert
a Rear seat backrest

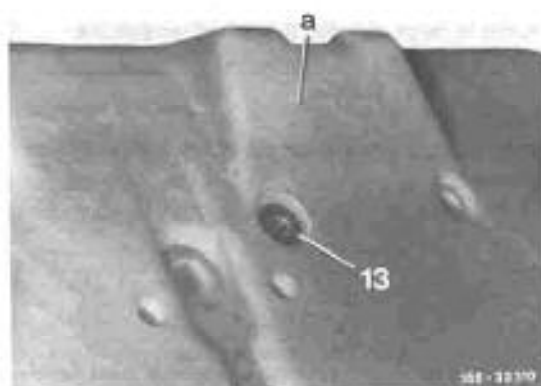

18 Put covering with foam part back on rear backrest. Then fit guides and protective covers (arrows).


19 Install rear backrest, left.

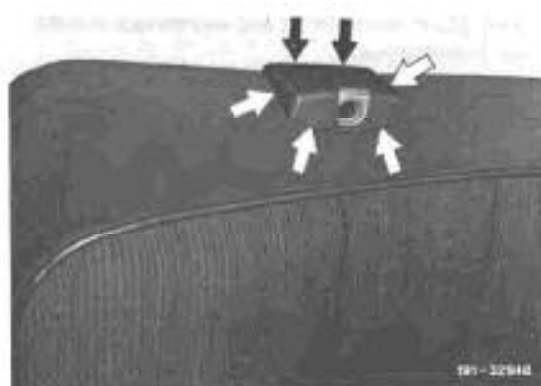

20 Mount protective covers and guide rails in such a manner that the conical part of the guide rail points to the left.

21 Slightly grease guide rail (e.g. vaseline).

- 7 Protective cover
- 8 Guide rail
- 9 Screw M6 x 25

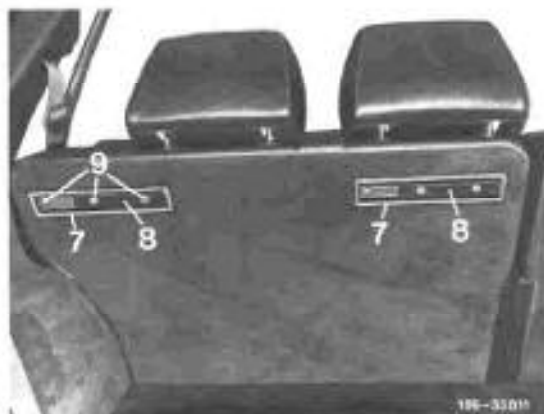

22 Introduce double roller blind through opened left-hand rear door into guide rails and slide to the right up to stop.

10 Double roller blind



How-to-order note

Take the parts required for installation from the following spare parts data:

Qty.	Designation	
1	Scope of delivery	
1	Double roller blind*)	
2	Linings, tailgate*)	ET fiche Group 92
2	Housing*)	
2	Guide rail*)	

*) Be sure to name color of interior in order.

Available from: Werk 50 (PEW Sindelfingen)



