


MODEL 203.0, 209.3 with CODE (551) Anti-theft alarm system (ATA [EDW])

Illustrated on model 203.0

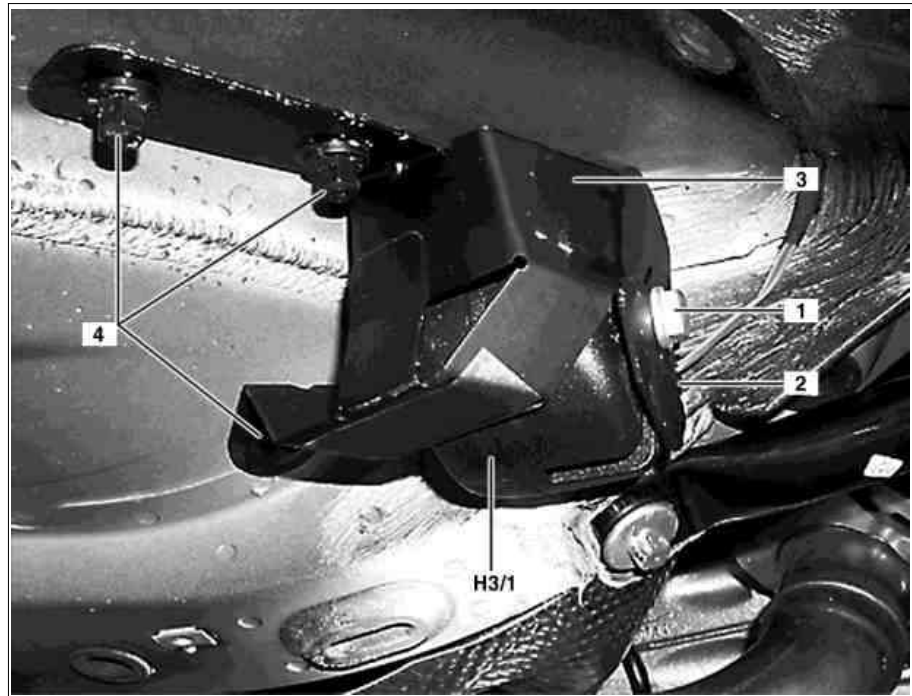


- 1 Bolt
 2 Connectors
 3 Bracket
 4 Nuts
 H3/1 Alarm signal horn with additional battery



P80.50-2180-06

Modification notes

6.6.06	"Disconnect/connect ground line on battery" removed		
--------	---	--	--

	Remove/install		
1	Remove inner fender in right front fender	 Only dismount rear part.	AR88.10-P-1300P
2	Disconnect connectors (2) from alarm signal horn with additional battery (H3/1)	 Before disconnecting the electrical connector ensure, that the anti-theft alarm system (ATA) is deactivated, otherwise the siren is activated (internal voltage supply via battery).	
3	Remove nuts (4)		
4	Remove alarm signal horn with additional battery (H3/1) with bracket (3)		
5	Remove bolt (1)		
6	Remove alarm signal horn with additional battery (H3/1) from bracket (3)		
7	Install in the reverse order		