


C. Sedan and coupé as of approx. 09/90, cabriolet from start of production

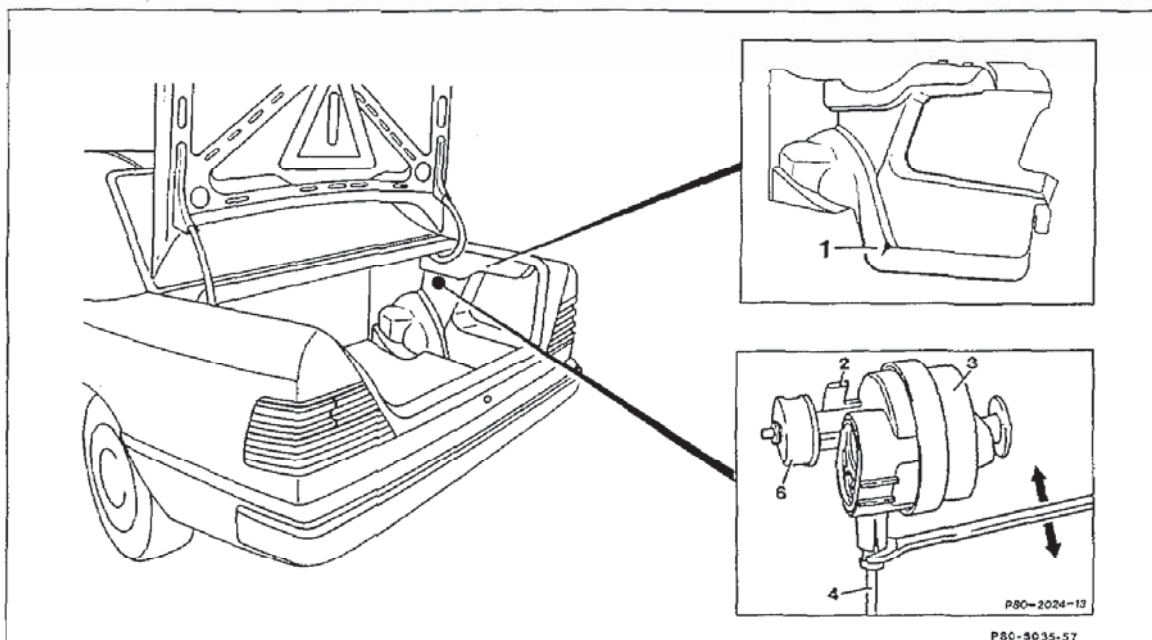

Panelling (1) in right of trunk	remove, install.
Fixing plate (2)	press away to remove.
Pneumatic line (4)	lever off using open-end wrench (width across flats 7).
Pneumatic operation of actuator (3)	check (80-116).
Pneumatic line	engage in actuator (3) to install.
Actuator (3)	engage in guide sleeve (6) to install.