


AR77.40- P- 5000GH	Remove/ install roof railing	22.5.97
MODEL 163.113 /128 / 136 /154 / 157 /172 / 174 /175		

- 1 Caps
- 2 Roof railing
- 3 Roof railing screw
- 4 Bolt
- 5 Screw for mounting plate
- 6 Attachment plate
- 7 Cover cap

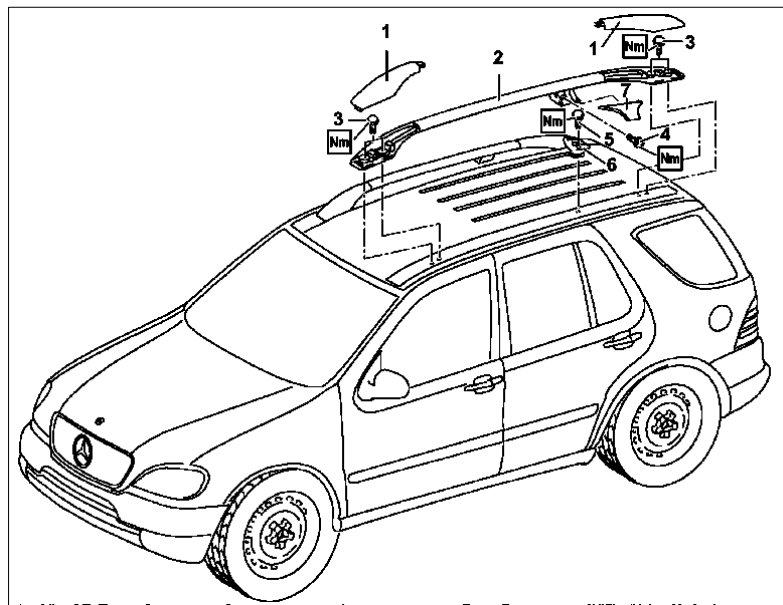

P77.40- 0208- 06

<input type="checkbox"/> <input type="checkbox"/>	Remove/ install		
<input type="checkbox"/>	Avoid damaging paint		
1	Unclip caps (1) from roof railing (2)		
2	Unscrew screws for roof railing (3) from roof paneling	<input type="checkbox"/> To facilitate removal heat screw heads with soldering gun, etc. (175 W, 4- 5 min). <input type="checkbox"/> Installation: Install new bolts.	*BA77.40-P-1001-01B
3	Unclip cap (7) from mounting plate (6)		
4	Remove screw (4) roof railing to securing plate (6)	<input type="checkbox"/>	*BA77.40-P-1002-01B
5	Remove roof railing (2)	<input type="checkbox"/> Check seal below roof railing for damage and replace if necessary. <input type="checkbox"/> Installation: Coat with sealing compound.	*BR00.45-Z-1028-01A
6	Unscrew screw for mounting plate (5) from roof railing	<input type="checkbox"/>	*BA77.40-P-1001-01B
7	Remove mounting plate (6)	<input type="checkbox"/> Check seal below mounting plate for damage and replace if necessary. <input type="checkbox"/> Installation: Coat with sealing compound.	*BR00.45-Z-1028-01A
8	Install in the reverse order		

☐ Roof railing

Number	Designation	Model Series 163
BA77.40- P- 1001- 01B	Screw for roof railing on roof paneling	Nm 9
BA77.40- P- 1002- 01B	Bolt, roof railing on mounting plate	Nm 9

Auxiliary repair materials

Number	Designation	Order number
BR00.45- Z- 1028- 01A	Sealant	A 000 989 10 71