


MODEL 230.467 /474 /475 /476 ## up to 064520 except CODE (804) Model year 2004

- 1 Mirror cover
- 2 Locking spring
- 3 Mirror lens

E6/5 Left outside mirror turn signal lamp
E6/6 Right outside mirror turn signal lamp

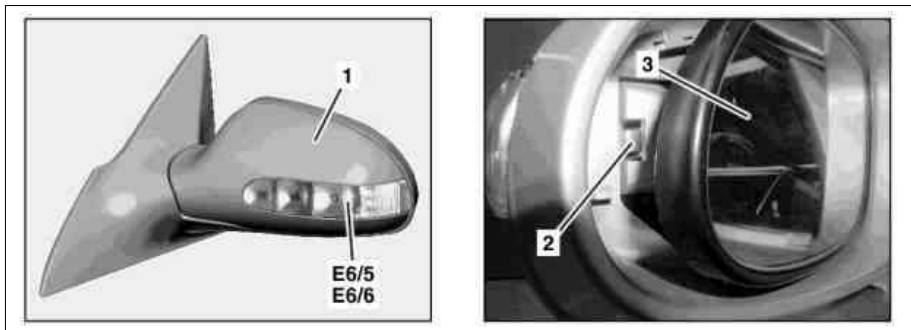

P82.25-2214-04

| <div> <div></div> <div></div> </div> | | Remove/Install | | |
|--------------------------------------|--|----------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------|
| 1 | | Fold in mirror lens (3) | | |
| 2 | | Release latch spring (2) using suitable screwdriver | ⚠ Carefully release locking spring (2) in order to avoid damage to the paint. | |
| 3 | | Withdraw left outside mirror turn signal lamp (E6/5) or right outside mirror turn signal lamp (E6/6) from mirror cover (1) | <div> <div></div> <div>When replacing the left outside mirror turn signal lamp (E6/5) or right outside mirror turn signal lamp (E6/6) the outside mirror housing has to be changed.</div> </div> <div> <div></div> <div>In contrast to the old one, the new version of the outside mirror turn signal lamp is bolted on.</div> </div> | AR88.70-P-9100-01Q |
| 4 | | Install in the reverse order | | |