


Operation number of the operation texts and work units or standard texts and flat rates:  
27-6060

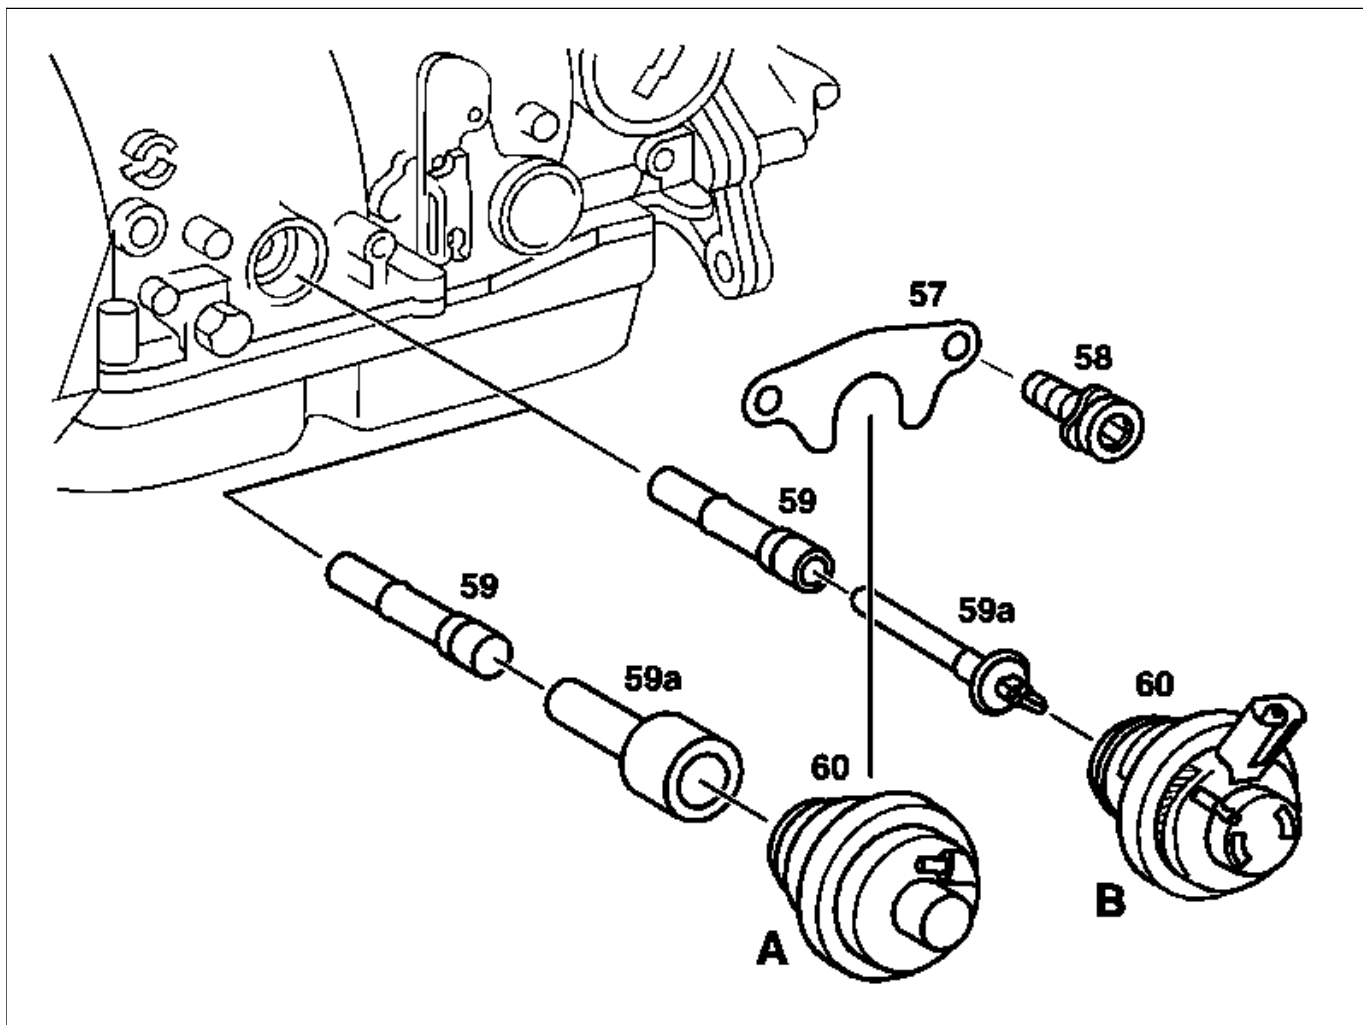

P27-5343-57

A to 07/92  
B from 08/92

Hexagon socket bolts (58).....	Unscrew, screw in, 8 Nm. Remove retaining plate (57).
Vacuum cell (60).....	Remove, check or adjust modulating pressure after installation (see op. no. 27-350).
Modulating pressure valve (59) and pressure pin for heat expansion compensation (59a).....	Remove, install, check smoothness of operation.